



Kabel USB A - mini-B 3m

Cena	11,99 zł
Dostępność	Dostępny
Czas wysyłki	1-2 dni robocze
Numer katalogowy	ai100151
Kod producenta	AKTBXKU3PBAW30B
Producent	Gembird

Opis produktu

Kabel USB A - mini B (5-pin) 3m



USB do mini USB Kabel pasuje do kamer, aparatów cyfrowych i urządzeń wyposażonych w popularny typ złącza mini USB 5-pin.

Pasuje m.in. do kamer i aparatów Canon, wielu modeli Sony, Panasonic, JVC i innych. Stosowany również powszechnie w innych urządzeniach - odtwarzacze MP3/MP4, drukarki, czytnik kart, napędy zewnętrzne, tablety itp. Wygląd gniazda USB mini B prezentujemy na zdjęciu obok. W razie wątpliwości czy kabel będzie pasował do posiadanego modelu prosimy o kontakt.

Zastępuje m.in. kable USB:

- Canon IFC-130U, IFC-200U, IFC-300PCU, IFC-400PCU
- Kodak U-5A
- Nikon UC-E4
- Olympus CB-USB4
- Panasonic K1HA05CD0001, K1HA05CD0004, K1HA05AD0006, K1HA05AD0007, K1HA06CD0002, K2KZ4CB00006, K1HA05CD0010, K1HY04YY0032, K2KYYYY00141
- Pentax I-USB6
- Samsung AD39-00073A, AD39-00132A, AH39-00498AG
- Sony VMC-14UMB2
- JVC QAM0324-001, QAM0538-001, QAM0571-001, QAM0719-001, QAM0791-001, QAM1112-001, QAM1313-001, WUU102SCP001

Pasuje m.in. do kamer i aparatów:

- Aiptek Action HD
- Aiptek AHD 200, AHD 300, AHD 300 PLUS

- Aiptek AHD AF1
- Aiptek AHD C100
- Aiptek AHD H5 Extreme (V5Z25S), AHD H12 Extreme (VAZ2S), AHD H23 (V5Z6)
- Aiptek AHD H23
- Aiptek AHD H125, AHD H135, AHD H250, AHD H350, AHD H500
- Aiptek AHD Z7
- Aiptek AHD Z500 PLUS, AHD Z600, AHD Z700, AHD Z700 Extreme
- Aiptek Aiptek3D iS2
- Aiptek Car Camcorder X3, Car Camcorder X-mini
- Aiptek Digimio T6HD
- Aiptek PocketDV Z100 LE, Z100 Pro
- Aiptek PocketDV Z200 LE, Z200 Pro
- Aiptek PocketDV Z300 HD-V, Z300HD
- Aiptek SportyCam Z3
- Canon Digital IXUS I, IXUS i zoom, IXUS i7 Zoom, IXUS II, IXUS IIs
- Canon Digital IXUS 30 , 40, 50, 55, 60, 65, 70, 75, 80 IS, 85 IS, 90 IS, 95 IS
- Canon Digital IXUS 100 IS, 110 IS, 115 HS, 117 HS, 120 IS, 125 HS, 127 HS
- Canon Digital IXUS105, 130, 132, 133, 135, 140, 145, 150, 155, 160, 165, 170
- Canon IXUS 175, IXUS 180
- Canon Digital IXUS 200 IS, 300, 330, 400, 430
- Canon Digital IXUS 500, 700, 750
- Canon Digital IXUS 900 Ti, 950 IS, 960 IS, 970 IS, 980 IS, 990 IS
- Canon Digital IXUS Wireless
- Canon EOS 1D C, EOS 1D X, EOS 1D Mark II, EOS 1D Mark II N, EOS 1D Mark III, EOS 1D Mark IV
- Canon EOS 1Ds Mark II, EOS 1Ds Mark III
- Canon EOS 5D, EOS 5D Mark II, EOS 5D Mark III, 6D, EOS 7D
- Canon EOS 10D, 20D, 40D, 50D, 60D, 60Da, 100D, EOS 300D, EOS 350D, EOS 400D, EOS 450D, EOS 500D, EOS 550D, EOS 600D, EOS 650D, EOS 700D
- Canon EOS 1000D, 1100D, 1200D
- Canon EOS Digital Rebel, EOS Digital Rebel Xt, EOS Digital Rebel Xti
- Canon EOS M
- Canon EOS Rebel SL1
- Canon EOS Rebel T1i, T2i, T3, T3i, T4i, T5, T5i
- Canon EOS Rebel XS, XSi
- Canon IXUS 105, 107, 115 HS, 125 HS, 127 HS, 130, 132, 133, 135, 140, 145, 150, 155
- Canon IXUS 210, 220 HS, 230 HS, 255 HS, 265 HS, 300 HS, 310 HS, 500 HS, 510 HS, IXUS 1000 HS, 1100 HS
- Canon PowerShot A10, A20, A30, A40, A60, A70, A75, A80, A85, A95
- Canon PowerShot A100, A200, A300, A310
- Canon PowerShot A400, A410, A420, A430, A450, A460, A470, A480, A490, A495
- Canon PowerShot A510, A520, A530, A540, A550, A560, A570 IS, A580
- Canon PowerShot A610, A620, A630, A640, A650 IS, A700, A710 IS, A800, A810
- Canon PowerShot A1000 IS, A1100 IS, A1200, A1300, A1400
- Canon PowerShot A2000 IS, A2100 IS, A2200, A2300, A2400 IS, A2500, A2600
- Canon PowerShot A3000 IS, A3100 IS, A3150 IS, A3200 IS, A3300 IS, A3350 IS, A3400 IS, A3500 IS
- Canon PowerShot A4000 IS
- Canon PowerShot D10, D20, D30
- Canon PowerShot E1
- Canon PowerShot ELPH 100 HS, 115 IS, 120 IS, 130 IS, 135, 140 IS, 150 IS
- Canon PowerShot ELPH 300 HS, 310 HS, 320 HS, 330 HS, ELPH 340 HS
- Canon PowerShot ELPH 500 HS, 510 HS, 520 HS, 530 HS
- Canon PowerShot G1X, G3, G5, G6, G7, G7X, G9, G10, G11, G12, G15, G16
- Canon PowerShot G1 X Mark II
- Canon PowerShot N, N100
- Canon PowerShot Pro1, Pro70
- Canon PowerShot S1 IS, S2 IS, S3 IS, S5 IS
- Canon PowerShot S30, S40, S45, S50, S60, S70, S80, S90, S95
- Canon PowerShot S100 (2011), S110 (2012), S120
- Canon PowerShot S200 (2014), S300, S330, S400, S410, S500
- Canon PowerShot SD10, SD20, SD30, SD40
- Canon PowerShot SD100, SD110, SD200, SD300, SD400, SD430, SD500, SD550, SD600, SD630
- Canon PowerShot SD700 IS, SD750, SD770 IS, SD780 IS, SD790 IS
- Canon PowerShot SD800 IS, SD850 IS, SD870 IS, SD880 IS, SD890 IS
- Canon PowerShot SD900, SD940 IS, SD950 IS, SD960 IS, SD970 IS, SD980 IS, SD990 IS
- Canon PowerShot SD1000, SD1100 IS, SD1200 IS, SD 1300 IS, SD1400
- Canon PowerShot SD3500 IS
- Canon PowerShot SD4000 IS, SD4500 IS
- Canon PowerShot SX1 IS
- Canon PowerShot SX10 IS, SX30 IS, SX40 HS, SX50 HS, SX60 HS
- Canon PowerShot SX100 IS, SX110 IS, SX120 IS, SX130 IS, SX150 IS, SX160 IS, SX170 IS

-
- Canon PowerShot SX200 IS, SX210 IS, SX220 HS, SX230 HS, SX240 HS, SX260 HS, SX270 HS, SX280 HS
 - Canon PowerShot SX400 IS
 - Canon PowerShot SX500 IS, SX510 HS, SX520 HS
 - Canon PowerShot SX600 HS, SX700 HS
 - Canon DC330, DC410, DC411, DC420
 - Canon ELURA 40MC, 50, 60, 65, 70, 80, 85, 90
 - Canon FS10, FS11, FS20, FS21, FS22, FS30, FS40
 - Canon FS100, FS200, FS300, FS400
 - Canon HG10
 - Canon HR10
 - Canon HV10, HV20, HV30
 - Canon LEGRIA FS19, FS20, FS21, FS22, FS36, FS37, FS46
 - Canon LEGRIA FS200, FS305, FS306, FS307, FS405, FS406
 - Canon LEGRIA HF G10, HF G25, HF G30
 - Canon LEGRIA HF M31, HF M32, HF M36, HF M40, HF M41, HF M46, HF M52, HF M56
 - Canon LEGRIA HF M300, HF M306, HF M307, HF M400, HF M406
 - Canon LEGRIA HF M506
 - Canon LEGRIA HF R106
 - Canon LEGRIA HF R16, HF R17, HF R18, HF R26, HF R27, HF R28, R36, HF R37, HF R38, HF R46
 - Canon HF R47, HF R48, HF R56, HF R57
 - Canon LEGRIA HF R205, HF R206, HF R306, HF R406, HF R506
 - Canon LEGRIA HF S10, HF S11, HF S20, HF S21, HF S30
 - Canon LEGRIA HF S100, HF S200
 - Canon LEGRIA HF20, HF21, HF200
 - Canon LEGRIA HG20, HG21
 - Canon LEGRIA HV40
 - Canon LEGRIA Mini, Mini X
 - Canon MD130, MD140, MD150, MD160, MD255, MD265
 - Canon MV5iMC, MV6iMC
 - Canon MV830, MV830i, MV850i, MV880x, MV880xi, MV930, MV940, MV950, MV960
 - Canon MVX20i, MVX25i, MVX30i, MVX35i, MVX40, MVX40i, MVX45i
 - Canon MVX200, MVX200i, MVX250i, MVX300, MVX330i, MVX350i
 - Canon Optura 30, 40, 50, 60, 400, 500
 - Canon VIXIA HF G10, HF G20, HF G30
 - Canon VIXIA HF M30, HF M31, HF M32, HF M40, HF M41, HF M50, HF M52
 - Canon VIXIA HF M300, HF M400, HF M500
 - Canon VIXIA HF R10, HF R11, HF R20, HF R21, HF R30, HF R32, HF R40, HF R42, HF R50, HF R52
 - Canon VIXIA HF R100, HF R200, HF R300, HF R400, HF R500
 - Canon VIXIA HF S10, HF S11, HF S20, HF S21, HF S30
 - Canon VIXIA HF S100, HF S200
 - Canon VIXIA HF10, HF11, HF20, HF100, HF200
 - Canon VIXIA HG10
 - Canon VIXIA HV20, HV30, HV40
 - Canon VIXIA Mini, Mini X
 - Canon XA10, XA20, XA25
 - Canon XF100, XF105, XF300, XF305
 - Canon ZR200, ZR300, ZR400, ZR600, ZR700, ZR830, ZR850, ZR950
 - Drift HD (1080p), HD Ghost, HD170, HD170 Stealth, HD720, X170
 - Fantec BeastVision HD
 - Fantec BeastVision HDX
 - Fujifilm FinePix A120, A345, A350, A400, A500, A600, A610, A700, A800, A820, A825, A900, A920, A925
 - Fujifilm FinePix HS20EXR, HS22EXR, HS30EXR, HS33EXR
 - Fujifilm FinePix S5 Pro
 - Fujifilm FinePix S5000, S5100, S5200, S5500, S5600, S6500 fd, S7000, S8600, S9100, S9500, S9600
 - Fujifilm FinePix Z3
 - Fujifilm X-E1
 - Fujifilm X-S1
 - HP Photosmart 433, 435, 735, 935
 - HP Photosmart E217, E317, E327, E337, E427
 - HP Photosmart M22, M23, M305, M307, M407, M415, M417, M425, M437, M447, M517, M525
 - HP M527, M537, M547, M627, M637, M737
 - HP Photosmart Mz67
 - HP Photosmart R507, R607, R707, R717, R725, R727, R742, R837, R847, R927, R937
 - HP Photosmart HP V5040u
 - JVC GC-FM1
 - JVC GC-PX10, GC-PX100
 - JVC GC-WP10
 - JVC GC-XA1, GC-XA2
 - JVC GR-D270, GR-D290, GR-D360, GR-D370, GR-D640, GR-D645, GR-D650, GR-D760, GR-D770, GR-D796, GR-D860

- JVC GR-DF430, GR-DF470, GR-DF540, GR-DF570
- JVC GS-TD1
- JVC GY-HM100
- JVC GZ-E10, GZ-E15, GZ-E100, GZ-E105, GZ-E200, GZ-E205, GZ-E207, GZ-E209, GZ-E300, GZ-E305, GZ-E309, GZ-E505, GZ-E509
- JVC GZ-EX210, GZ-EX215, GZ-EX310, GZ-EX315, GZ-EX355, GZ-EX510, GZ-EX515, GZ-EX555
- JVC GZ-GX1
- JVC GZ-HD3, GZ-HD5, GZ-HD6, GZ-HD7
- JVC GZ-HD10, GZ-HD30, GZ-HD40, GZ-HD300, GZ-HD320, GZ-HD500, GZ-HD510, GZ-HD520, GZ-HD620
- JVC GZ-HM1, GZ-HM30, GZ-HM200, GZ-HM300, GZ-HM310, GZ-HM330, GZ-HM334, GZ-HM440, GZ-HM445, GZ-HM446, GZ-HM550, GZ-HM650
- JVC GZ-MC100, GZ-MC200, GZ-MC500
- JVC GZ-MG20, GZ-MG21, GZ-MG24, GZ-MG26, GZ-MG27, GZ-MG30, GZ-MG33, GZ-MG37, GZ-MG40, GZ-MG47, GZ-MG50, GZ-MG57, GZ-MG60, GZ-MG67, GZ-MG70, GZ-MG77
- JVC GZ-MG131, GZ-MG133, GZ-MG134, GZ-MG135, GZ-MG140, GZ-MG150, GZ-MG155, JVC GZ-MG275, GZ-MG255, GZ-MG330, GZ-MG331, GZ-MG332, GZ-MG335, GZ-MG340, GZ-MG360, GZ-MG365
- JVC GZ-MG430, GZ-MG435, GZ-MG465, GZ-MG467, GZ-MG505, GZ-MG530, GZ-MG532, GZ-MG555, GZ-MG575, GZ-MG610, GZ-MG630, GZ-MG634, GZ-MG645, GZ-MG650, GZ-MG670, GZ-MG680, GZ-MG730, GZ-MG750, GZ-MG840
- JVC GZ-MS90, GZ-MS95, GZ-MS100, GZ-MS110, GZ-MS120, GZ-MS124, GZ-MS125, GZ-MS130, GZ-MS150, GZ-MS210, GZ-MS215, GZ-MS216, GZ-MS230, GZ-MS250
- JVC GZ-V500, GZ-V515
- JVC GZ-VX700, GZ-VX715, GZ-VX810, GZ-VX815
- Leica DIGILUX 1, DIGILUX 2
- Leica X1, X2
- Leica X Vario
- Liquid Image Apex 338
- Liquid Image Apex HD Wifi 339
- Liquid Image Explorer 300, 301, 302, 304
- Liquid Image Torque HD 368
- Liquid Image Torque HD Wifi 369
- Liquid Image Videomask 310, 311
- Olympus C-2 Zoom, C-50 Zoom, C-60 Zoom, C-120, C-150, C-160, C-200 Zoom, C-300 Zoom, C-310 Zoom, C-350 Zoom, C-360 Zoom, C-370 Zoom, C-380, C-390, C-450 Zoom, C-460 Zoom, C-470 Zoom, C-510, C-520 Zoom, C-550 Zoom
- Olympus C-720 Ultra Zoom, C-725 Ultra Zoom, C-730 Ultra Zoom, C-740 Ultra Zoom, C-750 Ultra Zoom, C-760 Ultra Zoom, C-765 UltraZoom, C-770 UltraZoom
- C-4000 Zoom, C-5000 Zoom, C-5050 Zoom, C-5060 WideZoom, C-7070 WideZoom, C-8080 WideZoom
- Olympus D-390, D-395, D-510 Zoom, D-535 Zoom, D-540 Zoom, D-550 Zoom, D-560 Zoom
- Olympus D-575 Zoom, D-580 Zoom, D-590 Zoom, D-700, D-765, D-770
- Olympus E-1, E-3, E-5, E-300
- Olympus FE-26, FE-170, FE-210, FE-270
- Olympus VG-110, VG-150, VG-165, VG-180
- Olympus μ 300, μ 400, μ 410
- Olympus X-21, X-100, X-200, X-350, X-400, X-450, X-500, X-760, X-775, X-815
- Panasonic Lumix DMC-F1, DMC-F7
- Panasonic Lumix DMC-FZ1, DMC-FZ2, DMC-FZ10
- Panasonic Lumix DMC-L1
- Panasonic Lumix DMC-LC1, DMC-LC5, DMC-LC20, DMC-LC33, DMC-LC40, DMC-LC43
- Panasonic HC-V10
- Panasonic HC-V100, HC-V100M, HC-V110, HC-V130, HC-V210, HC-V210M, HC-V500, HC-V500M, HC-V700, HC-V700M, HC-V707, HC-V707M, HC-V710, HC-V720, HC-V720M, HC-V727
- Panasonic HC-X800, HC-X810, HC-X900, HC-X900M, HC-X909, HC-X910, HC-X920, HC-X920M, HC-X929
- Panasonic HDC-DX1, HDC-DX3
- Panasonic HDC-HS9
- Panasonic HDC-HS20, HDC-HS60, HDC-HS80, HDC-HS100, HDC-HS200, HDC-HS250, HDC-HS300, HDC-HS700, HDC-HS900
- Panasonic HDC-SD1, HDC-SD3, HDC-SD5, HDC-SD9, HDC-SD9-8GB, HDC-SD10, HDC-SD20, HDC-SD40, HDC-SD60, HDC-SD66, HDC-SD80, HDC-SD90, HDC-SD99, HDC-SD100, HDC-SD200, HDC-SD300, HDC-SD600, HDC-SD700, HDC-SD707, HDC-SD800, HDC-SD900, HDC-SD909
- Panasonic HDC-SDT750
- Panasonic HDC-SDX1
- Panasonic HDC-SX5
- Panasonic HDC-TM10, HDC-TM15, HDC-TM20, HDC-TM40, HDC-TM55, HDC-TM60, HDC-TM80, HDC-TM90, HDC-TM200, HDC-TM300, HDC-TM350, HDC-TM700, HDC-TM900
- Panasonic NV-GS17, NV-GS21, NV-GS22, NV-GS24, NV-GS27, NV-GS28, NV-GS33, NV-GS35, NV-GS37, NV-GS38, NV-GS40, NV-GS44, NV-GS50, NV-GS55, NV-GS60, NV-GS65, NV-GS70, NV-GS75, NV-GS80, NV-GS85, NV-GS90
- Panasonic NV-GS120, NV-GS140, NV-GS150, NV-GS180, NV-GS188, NV-GS200, NV-GS230, NV-GS250, NV-GS258, NV-GS280, NV-GS300, NV-GS320, NV-GS330, NV-GS400, NV-GS500
- Panasonic SDR-H20, SDR-H40, SDR-H50, SDR-H60, SDR-H79, SDR-H80, SDR-H85, SDR-H86, SDR-H90, SDR-H95, SDR-

H100, SDR-H101

- Panasonic SDR-S7, SDR-S9, SDR-S10, SDR-S15, SDR-S25, SDR-S26, SDR-S45, SDR-S50, SDR-S70, SDR-S71
- Panasonic SDR-S150
- Panasonic SDR-SW20, SDR-SW21
- Panasonic SDR-T50, SDR-T55, SDR-T70, SDR-T71, SDR-T76
- Panasonic VDR-D50, VDR-D51
- Panasonic VDR-M30, VDR-M50, VDR-M70
- Praktica DMMC 10
- Praktica DMMC-3D
- Praktica DVC 10.1 HDMI
- Praktica DVC 10.10 FHD
- Praktica DVC 10.4 HDMI
- Praktica DVC 5.1 HD
- Praktica DVC 5.2 FHD
- Praktica DVC 5.4 FHD
- Praktica DVC 5.4 HDMI
- Praktica DVC 5.5 HDMI
- Praktica DVC 5.7 FHD
- Praktica IX-8
- Ricoh Caplio 300G
- Ricoh Caplio 400G Wide
- Ricoh Caplio 500G Wide, Caplio 500SE
- Ricoh Caplio G3 model M, Caplio G3 model S
- Ricoh Caplio G4, Caplio G4 Wide
- Ricoh Caplio GX, GX8
- Ricoh Caplio GX100
- Ricoh Caplio R1, Caplio R1S, Caplio R1V, Caplio R2, Caplio R3, Caplio R4, Caplio R5, Caplio R6, Caplio R7
- Ricoh Caplio R30, Caplio R40
- Ricoh Caplio RR30
- Ricoh Caplio RX
- Ricoh Caplio RZ1
- Ricoh CX1, CX2, CX3, CX4
- Ricoh G600, G700
- Ricoh GR Digital, GR Digital II, GR Digital III
- Ricoh GX200
- Ricoh GXR
- Ricoh PX
- Ricoh R8, R10
- Ricoh RDC-i500
- Rollei ActionCam 100
- Rollei Actioncam 5S WiFi
- Rollei Bullet 3S, Bullet 4S, Bullet 5S
- Rollei Compactline 302
- Rollei Movieline P3, P5
- Rollei Movieline SD5, SD15, SD23, SD40, SD50, SD230
- Rollei Powerflex 455
- Samsung SC-D22, SC-D23, SC-D24, SC-D93, SC-D99, SC-D352, SC-D353, SC-D354, SC-D355, SC-D363, SC-D375, SC-D381, SC-D382, SC-D383, SC-D385, SC-D453, SC-D455, SC-D457, SC-D530, SC-D590, SC-D963
- Samsung SC-D965, SC-D975
- Samsung SC-DC163, SC-DC164, SC-DC165, SC-DC173, SC-DC175, SC-DC563, SC-DC564, SC-DC565, SC-DC575
- Samsung SC-DX103, SC-DX105, SC-DX205
- Samsung SC-L870, SC-L907
- Samsung SC-MM10S, SC-MM11S, SC-MM12S
- Samsung SC-X205L, SC-X210L, SC-X220L, SC-X300, SC-X300L
- Samsung HMX-F80, HMX-F90, HMX-F91, HMX-F800, HMX-F810, HMX-F900, HMX-F910, HMX-F920
- Samsung HMX-H100, HMX-H104, HMX-H105, HMX-H106, HMX-H200, HMX-H203, HMX-H204, HMX-H205, HMX-H220, HMX-H300, HMX-H303, HMX-H304, HMX-H305, HMX-H320, HMX-H400, HMX-H405, HMX-H1000, HMX-H1052, HMX-H1062
- Samsung HMX-Q10, HMX-Q100, HMX-Q130
- Samsung HMX-S10, HMX-S15, HMX-S16
- Samsung HMX-T10, HMX-T11
- Samsung HMX-U10, HMX-U100
- Samsung SC-HMX10, SC-HMX10A, SC-HMX10C, SC-HMX20
- Samsung SC-MX10, SC-MX20
- Samsung SMX-C10, SMX-C13, SMX-C14, SMX-C20, SMX-C24, SMX-C100, SMX-C200
- Samsung SMX-F30, SMX-F33, SMX-F34, SMX-F40, SMX-F43, SMX-F44, SMX-F50, SMX-F70, SMX-F300, SMX-F400, SMX-F530, SMX-F700
- Samsung SMX-K40, SMX-K44, SMX-K45, SMX-K400, SMX-K442
- Samsung VP-D21, VP-D23, VP-D24, VP-D26, VP-D103, VP-D105, VP-D107, VP-D230, VP-D250, VP-D270, VP-D301, VP-

-
- D303, VP-D305, VP-D307, VP-D352, VP-D353, VP-D354, VP-D355, VP-D362, VP-D363, VP-D364, VP-D365, VP-D385(i), VP-D395(i)
 - Samsung VP-D453, VP-D454, VP-D455, VP-D463, VP-D467, VP-D530, VP-D590, VP-D653, VP-D655, VP-D963, VP-D964, VP-D965, VP-D6040, VP-D6050
 - Samsung VP-DC163, VP-DC173, VP-DC175, VP-DC435, VP-DC575, VP-DC563, VP-DC565
 - Samsung VP-DX10, VP-DX10H, VP-DX103(i), VP-DX104, VP-DX105(i), VP-DX205(i), VP-DX210(i), VP-DX2050
 - Samsung VP-HMX10, VP-HMX20
 - Samsung VP-MX10, VP-MX20, VP-MX25
 - Samsung VP-M2050, VP-M2100, VP-M2200
 - Samsung VP-MS10, VP-MS11, VP-MS12, VP-MS15
 - Samsung VP-X205L, VP-X210L, VP-X220L
 - Sony Cyber-shot DSC-F77, DSC-F707, DSC-F717, DSC-F828
 - Sony Cyber-shot DSC-FX77
 - Sony Cyber-shot DSC-G1
 - Sony Cyber-shot DSC-H1, DSC-H2, DSC-H5
 - Sony Cyber-shot DSC-L1
 - Sony Cyber-shot DSC-M1, DSC-M2
 - Sony Cyber-shot DSC-P1, DSC-P2, DSC-P3, DSC-P5, DSC-P7, DSC-P8, DSC-P9, DSC-P10, DSC-P20, DSC-P30, DSC-P31, DSC-P32, DSC-P41, DSC-P43, DSC-P50, DSC-P51, DSC-P52, DSC-P71, DSC-P72, DSC-P73, DSC-P92, DSC-P93
 - Sony Cyber-shot DSC-R1
 - Sony Cyber-shot DSC-S40, DSC-S75, DSC-S85, DSC-S500, DSC-S600, DSC-S930
 - Sony Cyber-shot DSC-T7
 - Sony Cyber-shot DSC-U10, DSC-U20, DSC-U30, DSC-U40, DSC-U50, DSC-U60
 - Sony Cyber-shot DSC-V1, DSC-V3
 - Sony Cyber-shot DSC-W1, DSC-W5, DSC-W7, DSC-W12, DSC-W15, DSC-W17, DSC-W30, DSC-W35, DSC-W40
 - Sony DSLR-A230 (Alfa 230)
 - Sony DSLR-A290 (Alfa 290)
 - Sony DSLR-A330 (Alfa 330)
 - Sony DSLR-A380 (Alfa 380)
 - Sony DSLR-A390 (Alfa 390)
 - Sony DSLR-A450 (Alfa 450)
 - Sony DSLR-A500 (Alfa 500)
 - Sony DSLR-A560 (Alfa 560)
 - Sony DSLR-A580 (Alfa 580)
 - Sony NEX-3
 - Sony NEX-5
 - Sony NEX-7
 - Sony NEX-5N
 - Sony NEX-C3
 - Sony SLT-A33 (Alfa 33)
 - Sony SLT-A35 (Alfa 35)
 - Sony SLT-A37 (Alfa 37)
 - Sony SLT-A55 (Alfa 55)
 - Sony SLT-A57 (Alfa 57)
 - Sony SLT-A65 (Alfa 65)
 - Sony SLT-A77 (Alfa 77)
 - Sony SLT-A99 (Alfa 99)
 - Sony DCR-DVD
 - Sony DCR-DVD92, DCR-DVD106, DCR-DVD109, DCR-DVD110, DCR-DVD115, DCR-DVD150, DCR-DVD202, DCR-DVD203/ DCR-DVD306, DCR-DVD310, DCR-DVD403, DCR-DVD404, DCR-DVD405, DCR-DVD406, DCR-DVD408, DCR-DVD410, DCR-DVD450
 - Sony DCR-DVD505, DCR-DVD508, DCR-DVD602, DCR-DVD610, DCR-DVD650, DCR-DVD653/ DCR-DVD703, DCR-DVD710, DCR-DVD803, DCR-DVD805, DCR-DVD808, DCR-DVD810, DCR-DVD850, DCR-DVD908
 - Sony DCR-HC
 - Sony DCR-HC20, DCR-HC21, DCR-HC26, DCR-HC30, DCR-HC32, DCR-HC36, DCR-HC38, DCR-HC40, DCR-HC42, DCR-HC44, DCR-HC46, DCR-HC48
 - Sony DCR-HC53, DCR-HC54, / DCR-HC62, DCR-HC65, DCR-HC85, DCR-HC94, DCR-HC96
 - Sony DCR-PJ
 - Sony DCR-PJ5
 - Sony DCR-SR
 - Sony DCR-SR15, DCR-SR20, DCR-SR21, DCR-SR30, DCR-SR32, DCR-SR33, DCR-SR35, DCR-SR36, DCR-SR37, DCR-SR38
 - Sony DCR-SR40, DCR-SR42, DCR-SR45, DCR-SR46, DCR-SR48, DCR-SR50, DCR-SR52, DCR-SR55, DCR-SR57, DCR-SR58
 - Sony DCR-SR60, DCR-SR62, DCR-SR65, DCR-SR67, DCR-SR68, DCR-SR70, DCR-SR72, DCR-SR75, DCR-SR77, DCR-SR78
 - Sony DCR-SR80, DCR-SR82, DCR-SR85, DCR-SR87, DCR-SR88, DCR-SR90, DCR-SR100, DCR-SR190, DCR-SR200, DCR-SR210, DCR-SR220, DCR-SR290, DCR-SR300
 - Sony DCR-SX
 - Sony DCR-SX15, DCR-SX20, DCR-SX21, DCR-SX22, DCR-SX30, DCR-SX31, DCR-SX33, DCR-SX34, DCR-SX40, DCR-SX41, DCR-SX43, DCR-SX45, DCR-SX50, DCR-SX53, DCR-SX60, DCR-SX63, DCR-SX65, DCR-SX85
 - Sony DEV-3, DEV-5

-
- Sony HDR-CX
 - Sony HDR-CX6, HDR-CX7, HDR-CX11, HDR-CX12, HDR-CX100, HDR-CX105, HDR-CX106, HDR-CX110, HDR-CX115, HDR-CX116, HDR-CX130, HDR-CX150, HDR-CX155, HDR-CX160, HDR-CX180, HDR-CX190
 - Sony HDR-CX200, HDR-CX210, HDR-CX250, HDR-CX260, HDR-CX270, HDR-CX300, HDR-CX305, HDR-CX350, HDR-CX370, HDR-CX500, HDR-CX505, HDR-CX520, HDR-CX550, HDR-CX560, HDR-CX570, HDR-CX580, HDR-CX690, HDR-CX700, HDR-CX730, HDR-CX740
 - Sony HDR-HC
 - Sony HDR-HC3, HDR-HC9
 - Sony HDR-PJ
 - Sony HDR-PJ200, HDR-PJ260, HDR-PJ600, HDR-PJ740
 - Sony HDR-SR
 - Sony HDR-SR5, HDR-SR7, HDR-SR8, HDR-SR10, HDR-SR11, HDR-SR12
 - Sony HDR-TD
 - Sony HDR-TD10, HDR-T20
 - Sony HDR-UX
 - Sony HDR-UX3, HDR-UX5, HDR-UX7, HDR-UX9, HDR-UX10, HDR-UX19, HDR-UX20
 - Sony HDR-XR
 - Sony HDR-XR100, HDR-XR105, HDR-XR106, HDR-XR150, HDR-XR155, HDR-XR200, HDR-XR260, HDR-XR350, HDR-XR500, HDR-XR520, HDR-XR550
 - Toshiba Camileo B10
 - Toshiba Camileo BW20
 - Toshiba Camileo Clip
 - Toshiba Camileo H10, H20, H30
 - Toshiba Camileo HD
 - Toshiba Camileo P10, P20, P25, P30, P100
 - Toshiba Camileo Pro, Pro HD
 - Toshiba Camileo S10, S20, S30
 - Toshiba Camileo X100, X150, X155, X200, X400, X416, X450
 - Toshiba Camileo Z100
 - Toshiba PDR-M500, PDR-M700