

Dane aktualne na dzień: 02-05-2025 06:35

Link do produktu: <https://sklepvideo.pl/kabel-usb-miniusb-3m-p-5990.html>



## Kabel USB A - mini-B 3m

|                  |                        |
|------------------|------------------------|
| Cena             | <b>9,99 zł</b>         |
| Dostępność       | <b>Dostępny</b>        |
| Czas wysyłki     | <b>1-2 dni robocze</b> |
| Numer katalogowy | <b>ai100151</b>        |
| Kod producenta   | <b>AKTBXKU3PBAW30B</b> |
| Producent        | <b>Gembird</b>         |

### Opis produktu

#### Kabel USB A - mini B (5-pin) 3m



**USB do mini USB** Kabel pasuje do kamer, aparatów cyfrowych i urządzeń wyposażonych w popularny typ złącza mini USB 5-pin.

Pasuje m.in. do kamer i aparatów Canon, wielu modeli Sony, Panasonic, JVC i innych. Stosowany również powszechnie w innych urządzeniach - odtwarzacze MP3/MP4, drukarki, czytnik kart, napędy zewnętrzne, tablety itp. Wygląd gniazda USB mini B prezentujemy na zdjęciu obok. W razie wątpliwości czy kabel będzie pasował do posiadanego modelu prosimy o kontakt.

#### Zastępuje m.in. kable USB:

- Canon IFC-130U, IFC-200U, IFC-300PCU, IFC-400PCU
- Kodak U-5A
- Nikon UC-E4
- Olympus CB-USB4
- Panasonic K1HA05CD0001, K1HA05CD0004, K1HA05AD0006, K1HA05AD0007, K1HA06CD0002, K2KZ4CB00006, K1HA05CD0010, K1HY04YY0032, K2KYYYY00141
- Pentax I-USB6
- Samsung AD39-00073A, AD39-00132A, AH39-00498AG
- Sony VMC-14UMB2
- JVC QAM0324-001, QAM0538-001, QAM0571-001, QAM0719-001, QAM0791-001, QAM1112-001, QAM1313-001, WUU102SCP001

#### Pasuje m.in. do kamer i aparatów:

- Aiptek Action HD
- Aiptek AHD 200, AHD 300, AHD 300 PLUS

- 
- Aiptek AHD AF1
  - Aiptek AHD C100
  - Aiptek AHD H5 Extreme (V5Z25S), AHD H12 Extreme (VAZ2S), AHD H23 (V5Z6)
  - Aiptek AHD H23
  - Aiptek AHD H125, AHD H135, AHD H250, AHD H350, AHD H500
  - Aiptek AHD Z7
  - Aiptek AHD Z500 PLUS, AHD Z600, AHD Z700, AHD Z700 Extreme
  - Aiptek Aiptek3D iS2
  - Aiptek Car Camcorder X3, Car Camcorder X-mini
  - Aiptek Digimio T6HD
  - Aiptek PocketDV Z100 LE, Z100 Pro
  - Aiptek PocketDV Z200 LE, Z200 Pro
  - Aiptek PocketDV Z300 HD-V, Z300HD
  - Aiptek SportyCam Z3
  - Canon Digital IXUS I, IXUS i zoom, IXUS i7 Zoom, IXUS II, IXUS IIs
  - Canon Digital IXUS 30 , 40, 50, 55, 60, 65, 70, 75, 80 IS, 85 IS, 90 IS, 95 IS
  - Canon Digital IXUS 100 IS, 110 IS, 115 HS, 117 HS, 120 IS, 125 HS, 127 HS
  - Canon Digital IXUS105, 130, 132, 133, 135, 140, 145, 150, 155, 160, 165, 170
  - Canon IXUS 175, IXUS 180
  - Canon Digital IXUS 200 IS, 300, 330, 400, 430
  - Canon Digital IXUS 500, 700, 750
  - Canon Digital IXUS 900 Ti, 950 IS, 960 IS, 970 IS, 980 IS, 990 IS
  - Canon Digital IXUS Wireless
  - Canon EOS 1D C, EOS 1D X, EOS 1D Mark II, EOS 1D Mark II N, EOS 1D Mark III, EOS 1D Mark IV
  - Canon EOS 1Ds Mark II, EOS 1Ds Mark III
  - Canon EOS 5D, EOS 5D Mark II, EOS 5D Mark III, 6D, EOS 7D
  - Canon EOS 10D, 20D, 40D, 50D, 60D, 60Da, 100D, EOS 300D, EOS 350D, EOS 400D, EOS 450D, EOS 500D, EOS 550D, EOS 600D, EOS 650D, EOS 700D
  - Canon EOS 1000D, 1100D, 1200D
  - Canon EOS Digital Rebel, EOS Digital Rebel Xt, EOS Digital Rebel Xti
  - Canon EOS M
  - Canon EOS Rebel SL1
  - Canon EOS Rebel T1i, T2i, T3, T3i, T4i, T5, T5i
  - Canon EOS Rebel XS, XSi
  - Canon IXUS 105, 107, 115 HS, 125 HS, 127 HS, 130, 132, 133, 135, 140, 145, 150, 155
  - Canon IXUS 210, 220 HS, 230 HS, 255 HS, 265 HS, 300 HS, 310 HS, 500 HS, 510 HS, IXUS 1000 HS, 1100 HS
  - Canon PowerShot A10, A20, A30, A40, A60, A70, A75, A80, A85, A95
  - Canon PowerShot A100, A200, A300, A310
  - Canon PowerShot A400, A410, A420, A430, A450, A460, A470, A480, A490, A495
  - Canon PowerShot A510, A520, A530, A540, A550, A560, A570 IS, A580
  - Canon PowerShot A610, A620, A630, A640, A650 IS, A700, A710 IS, A800, A810
  - Canon PowerShot A1000 IS, A1100 IS, A1200, A1300, A1400
  - Canon PowerShot A2000 IS, A2100 IS, A2200, A2300, A2400 IS, A2500, A2600
  - Canon PowerShot A3000 IS, A3100 IS, A3150 IS, A3200 IS, A3300 IS, A3350 IS, A3400 IS, A3500 IS
  - Canon PowerShot A4000 IS
  - Canon PowerShot D10, D20, D30
  - Canon PowerShot E1
  - Canon PowerShot ELPH 100 HS, 115 IS, 120 IS, 130 IS, 135, 140 IS, 150 IS
  - Canon PowerShot ELPH 300 HS, 310 HS, 320 HS, 330 HS, ELPH 340 HS
  - Canon PowerShot ELPH 500 HS, 510 HS, 520 HS, 530 HS
  - Canon PowerShot G1X, G3, G5, G6, G7, G7X, G9, G10, G11, G12, G15, G16
  - Canon PowerShot G1 X Mark II
  - Canon PowerShot N, N100
  - Canon PowerShot Pro1, Pro70
  - Canon PowerShot S1 IS, S2 IS, S3 IS, S5 IS
  - Canon PowerShot S30, S40, S45, S50, S60, S70, S80, S90, S95
  - Canon PowerShot S100 (2011), S110 (2012), S120
  - Canon PowerShot S200 (2014), S300, S330, S400, S410, S500
  - Canon PowerShot SD10, SD20, SD30, SD40
  - Canon PowerShot SD100, SD110, SD200, SD300, SD400, SD430, SD500, SD550, SD600, SD630
  - Canon PowerShot SD700 IS, SD750, SD770 IS, SD780 IS, SD790 IS
  - Canon PowerShot SD800 IS, SD850 IS, SD870 IS, SD880 IS, SD890 IS
  - Canon PowerShot SD900, SD940 IS, SD950 IS, SD960 IS, SD970 IS, SD980 IS, SD990 IS
  - Canon PowerShot SD1000, SD1100 IS, SD1200 IS, SD 1300 IS, SD1400
  - Canon PowerShot SD3500 IS
  - Canon PowerShot SD4000 IS, SD4500 IS
  - Canon PowerShot SX1 IS
  - Canon PowerShot SX10 IS, SX30 IS, SX40 HS, SX50 HS, SX60 HS
  - Canon PowerShot SX100 IS, SX110 IS, SX120 IS, SX130 IS, SX150 IS, SX160 IS, SX170 IS

- 
- Canon PowerShot SX200 IS, SX210 IS, SX220 HS, SX230 HS, SX240 HS, SX260 HS, SX270 HS, SX280 HS
  - Canon PowerShot SX400 IS
  - Canon PowerShot SX500 IS, SX510 HS, SX520 HS
  - Canon PowerShot SX600 HS, SX700 HS
  - Canon DC330, DC410, DC411, DC420
  - Canon ELURA 40MC, 50, 60, 65, 70, 80, 85, 90
  - Canon FS10, FS11, FS20, FS21, FS22, FS30, FS40
  - Canon FS100, FS200, FS300, FS400
  - Canon HG10
  - Canon HR10
  - Canon HV10, HV20, HV30
  - Canon LEGRIA FS19, FS20, FS21, FS22, FS36, FS37, FS46
  - Canon LEGRIA FS200, FS305, FS306, FS307, FS405, FS406
  - Canon LEGRIA HF G10, HF G25, HF G30
  - Canon LEGRIA HF M31, HF M32, HF M36, HF M40, HF M41, HF M46, HF M52, HF M56
  - Canon LEGRIA HF M300, HF M306, HF M307, HF M400, HF M406
  - Canon LEGRIA HF M506
  - Canon LEGRIA HF R106
  - Canon LEGRIA HF R16, HF R17, HF R18, HF R26, HF R27, HF R28, R36, HF R37, HF R38, HF R46
  - Canon HF R47, HF R48, HF R56, HF R57
  - Canon LEGRIA HF R205, HF R206, HF R306, HF R406, HF R506
  - Canon LEGRIA HF S10, HF S11, HF S20, HF S21, HF S30
  - Canon LEGRIA HF S100, HF S200
  - Canon LEGRIA HF20, HF21, HF200
  - Canon LEGRIA HG20, HG21
  - Canon LEGRIA HV40
  - Canon LEGRIA Mini, Mini X
  - Canon MD130, MD140, MD150, MD160, MD255, MD265
  - Canon MV5iMC, MV6iMC
  - Canon MV830, MV830i, MV850i, MV880x, MV880xi, MV930, MV940, MV950, MV960
  - Canon MVX20i, MVX25i, MVX30i, MVX35i, MVX40, MVX40i, MVX45i
  - Canon MVX200, MVX200i, MVX250i, MVX300, MVX330i, MVX350i
  - Canon Optura 30, 40, 50, 60, 400, 500
  - Canon VIXIA HF G10, HF G20, HF G30
  - Canon VIXIA HF M30, HF M31, HF M32, HF M40, HF M41, HF M50, HF M52
  - Canon VIXIA HF M300, HF M400, HF M500
  - Canon VIXIA HF R10, HF R11, HF R20, HF R21, HF R30, HF R32, HF R40, HF R42, HF R50, HF R52
  - Canon VIXIA HF R100, HF R200, HF R300, HF R400, HF R500
  - Canon VIXIA HF S10, HF S11, HF S20, HF S21, HF S30
  - Canon VIXIA HF S100, HF S200
  - Canon VIXIA HF10, HF11, HF20, HF100, HF200
  - Canon VIXIA HG10
  - Canon VIXIA HV20, HV30, HV40
  - Canon VIXIA Mini, Mini X
  - Canon XA10, XA20, XA25
  - Canon XF100, XF105, XF300, XF305
  - Canon ZR200, ZR300, ZR400, ZR600, ZR700, ZR830, ZR850, ZR950
  - Drift HD (1080p), HD Ghost, HD170, HD170 Stealth, HD720, X170
  - Fantec BeastVision HD
  - Fantec BeastVision HDX
  - Fujifilm FinePix A120, A345, A350, A400, A500, A600, A610, A700, A800, A820, A825, A900, A920, A925
  - Fujifilm FinePix HS20EXR, HS22EXR, HS30EXR, HS33EXR
  - Fujifilm FinePix S5 Pro
  - Fujifilm FinePix S5000, S5100, S5200, S5500, S5600, S6500 fd, S7000, S8600, S9100, S9500, S9600
  - Fujifilm FinePix Z3
  - Fujifilm X-E1
  - Fujifilm X-S1
  - HP Photosmart 433, 435, 735, 935
  - HP Photosmart E217, E317, E327, E337, E427
  - HP Photosmart M22, M23, M305, M307, M407, M415, M417, M425, M437, M447, M517, M525
  - HP M527, M537, M547, M627, M637, M737
  - HP Photosmart Mz67
  - HP Photosmart R507, R607, R707, R717, R725, R727, R742, R837, R847, R927, R937
  - HP Photosmart HP V5040u
  - JVC GC-FM1
  - JVC GC-PX10, GC-PX100
  - JVC GC-WP10
  - JVC GC-XA1, GC-XA2
  - JVC GR-D270, GR-D290, GR-D360, GR-D370, GR-D640, GR-D645, GR-D650, GR-D760, GR-D770, GR-D796, GR-D860

- 
- JVC GR-DF430, GR-DF470, GR-DF540, GR-DF570
  - JVC GS-TD1
  - JVC GY-HM100
  - JVC GZ-E10, GZ-E15, GZ-E100, GZ-E105, GZ-E200, GZ-E205, GZ-E207, GZ-E209, GZ-E300, GZ-E305, GZ-E309, GZ-E505, GZ-E509
  - JVC GZ-EX210, GZ-EX215, GZ-EX310, GZ-EX315, GZ-EX355, GZ-EX510, GZ-EX515, GZ-EX555
  - JVC GZ-GX1
  - JVC GZ-HD3, GZ-HD5, GZ-HD6, GZ-HD7
  - JVC GZ-HD10, GZ-HD30, GZ-HD40, GZ-HD300, GZ-HD320, GZ-HD500, GZ-HD510, GZ-HD520, GZ-HD620
  - JVC GZ-HM1, GZ-HM30, GZ-HM200, GZ-HM300, GZ-HM310, GZ-HM330, GZ-HM334, GZ-HM440, GZ-HM445, GZ-HM446, GZ-HM550, GZ-HM650
  - JVC GZ-MC100, GZ-MC200, GZ-MC500
  - JVC GZ-MG20, GZ-MG21, GZ-MG24, GZ-MG26, GZ-MG27, GZ-MG30, GZ-MG33, GZ-MG37, GZ-MG40, GZ-MG47, GZ-MG50, GZ-MG57, GZ-MG60, GZ-MG67, GZ-MG70, GZ-MG77
  - JVC GZ-MG131, GZ-MG133, GZ-MG134, GZ-MG135, GZ-MG140, GZ-MG150, GZ-MG155, JVC GZ-MG275, GZ-MG255, GZ-MG330, GZ-MG331, GZ-MG332, GZ-MG335, GZ-MG340, GZ-MG360, GZ-MG365
  - JVC GZ-MG430, GZ-MG435, GZ-MG465, GZ-MG467, GZ-MG505, GZ-MG530, GZ-MG532, GZ-MG555, GZ-MG575, GZ-MG610, GZ-MG630, GZ-MG634, GZ-MG645, GZ-MG650, GZ-MG670, GZ-MG680, GZ-MG730, GZ-MG750, GZ-MG840
  - JVC GZ-MS90, GZ-MS95, GZ-MS100, GZ-MS110, GZ-MS120, GZ-MS124, GZ-MS125, GZ-MS130, GZ-MS150, GZ-MS210, GZ-MS215, GZ-MS216, GZ-MS230, GZ-MS250
  - JVC GZ-V500, GZ-V515
  - JVC GZ-VX700, GZ-VX715, GZ-VX810, GZ-VX815
  - Leica DIGILUX 1, DIGILUX 2
  - Leica X1, X2
  - Leica X Vario
  - Liquid Image Apex 338
  - Liquid Image Apex HD Wifi 339
  - Liquid Image Explorer 300, 301, 302, 304
  - Liquid Image Torque HD 368
  - Liquid Image Torque HD Wifi 369
  - Liquid Image Videomask 310, 311
  - Olympus C-2 Zoom, C-50 Zoom, C-60 Zoom, C-120, C-150, C-160, C-200 Zoom, C-300 Zoom, C-310 Zoom, C-350 Zoom, C-360 Zoom, C-370 Zoom, C-380, C-390, C-450 Zoom, C-460 Zoom, C-470 Zoom, C-510, C-520 Zoom, C-550 Zoom
  - Olympus C-720 Ultra Zoom, C-725 Ultra Zoom, C-730 Ultra Zoom, C-740 Ultra Zoom, C-750 Ultra Zoom, C-760 Ultra Zoom, C-765 UltraZoom, C-770 UltraZoom
  - C-4000 Zoom, C-5000 Zoom, C-5050 Zoom, C-5060 WideZoom, C-7070 WideZoom, C-8080 WideZoom
  - Olympus D-390, D-395, D-510 Zoom, D-535 Zoom, D-540 Zoom, D-550 Zoom, D-560 Zoom
  - Olympus D-575 Zoom, D-580 Zoom, D-590 Zoom, D-700, D-765, D-770
  - Olympus E-1, E-3, E-5, E-300
  - Olympus FE-26, FE-170, FE-210, FE-270
  - Olympus VG-110, VG-150, VG-165, VG-180
  - Olympus  $\mu$  300,  $\mu$  400,  $\mu$  410
  - Olympus X-21, X-100, X-200, X-350, X-400, X-450, X-500, X-760, X-775, X-815
  - Panasonic Lumix DMC-F1, DMC-F7
  - Panasonic Lumix DMC-FZ1, DMC-FZ2, DMC-FZ10
  - Panasonic Lumix DMC-L1
  - Panasonic Lumix DMC-LC1, DMC-LC5, DMC-LC20, DMC-LC33, DMC-LC40, DMC-LC43
  - Panasonic HC-V10
  - Panasonic HC-V100, HC-V100M, HC-V110, HC-V130, HC-V210, HC-V210M, HC-V500, HC-V500M, HC-V700, HC-V700M, HC-V707, HC-V707M, HC-V710, HC-V720, HC-V720M, HC-V727
  - Panasonic HC-X800, HC-X810, HC-X900, HC-X900M, HC-X909, HC-X910, HC-X920, HC-X920M, HC-X929
  - Panasonic HDC-DX1, HDC-DX3
  - Panasonic HDC-HS9
  - Panasonic HDC-HS20, HDC-HS60, HDC-HS80, HDC-HS100, HDC-HS200, HDC-HS250, HDC-HS300, HDC-HS700, HDC-HS900
  - Panasonic HDC-SD1, HDC-SD3, HDC-SD5, HDC-SD9, HDC-SD9-8GB, HDC-SD10, HDC-SD20, HDC-SD40, HDC-SD60, HDC-SD66, HDC-SD80, HDC-SD90, HDC-SD99, HDC-SD100, HDC-SD200, HDC-SD300, HDC-SD600, HDC-SD700, HDC-SD707, HDC-SD800, HDC-SD900, HDC-SD909
  - Panasonic HDC-SDT750
  - Panasonic HDC-SDX1
  - Panasonic HDC-SX5
  - Panasonic HDC-TM10, HDC-TM15, HDC-TM20, HDC-TM40, HDC-TM55, HDC-TM60, HDC-TM80, HDC-TM90, HDC-TM200, HDC-TM300, HDC-TM350, HDC-TM700, HDC-TM900
  - Panasonic NV-GS17, NV-GS21, NV-GS22, NV-GS24, NV-GS27, NV-GS28, NV-GS33, NV-GS35, NV-GS37, NV-GS38, NV-GS40, NV-GS44, NV-GS50, NV-GS55, NV-GS60, NV-GS65, NV-GS70, NV-GS75, NV-GS80, NV-GS85, NV-GS90
  - Panasonic NV-GS120, NV-GS140, NV-GS150, NV-GS180, NV-GS188, NV-GS200, NV-GS230, NV-GS250, NV-GS258, NV-GS280, NV-GS300, NV-GS320, NV-GS330, NV-GS400, NV-GS500
  - Panasonic SDR-H20, SDR-H40, SDR-H50, SDR-H60, SDR-H79, SDR-H80, SDR-H85, SDR-H86, SDR-H90, SDR-H95, SDR-

- 
- H100, SDR-H101
- Panasonic SDR-S7, SDR-S9, SDR-S10, SDR-S15, SDR-S25, SDR-S26, SDR-S45, SDR-S50, SDR-S70, SDR-S71
  - Panasonic SDR-S150
  - Panasonic SDR-SW20, SDR-SW21
  - Panasonic SDR-T50, SDR-T55, SDR-T70, SDR-T71, SDR-T76
  - Panasonic VDR-D50, VDR-D51
  - Panasonic VDR-M30, VDR-M50, VDR-M70
  - Praktica DMMC 10
  - Praktica DMMC-3D
  - Praktica DVC 10.1 HDMI
  - Praktica DVC 10.10 FHD
  - Praktica DVC 10.4 HDMI
  - Praktica DVC 5.1 HD
  - Praktica DVC 5.2 FHD
  - Praktica DVC 5.4 FHD
  - Praktica DVC 5.4 HDMI
  - Praktica DVC 5.5 HDMI
  - Praktica DVC 5.7 FHD
  - Praktica IX-8
  - Ricoh Caplio 300G
  - Ricoh Caplio 400G Wide
  - Ricoh Caplio 500G Wide, Caplio 500SE
  - Ricoh Caplio G3 model M, Caplio G3 model S
  - Ricoh Caplio G4, Caplio G4 Wide
  - Ricoh Caplio GX, GX8
  - Ricoh Caplio GX100
  - Ricoh Caplio R1, Caplio R1S, Caplio R1V, Caplio R2, Caplio R3, Caplio R4, Caplio R5, Caplio R6, Caplio R7
  - Ricoh Caplio R30, Caplio R40
  - Ricoh Caplio RR30
  - Ricoh Caplio RX
  - Ricoh Caplio RZ1
  - Ricoh CX1, CX2, CX3, CX4
  - Ricoh G600, G700
  - Ricoh GR Digital, GR Digital II, GR Digital III
  - Ricoh GX200
  - Ricoh GXR
  - Ricoh PX
  - Ricoh R8, R10
  - Ricoh RDC-i500
  - Rollei ActionCam 100
  - Rollei Actioncam 5S WiFi
  - Rollei Bullet 3S, Bullet 4S, Bullet 5S
  - Rollei Compactline 302
  - Rollei Movieline P3, P5
  - Rollei Movieline SD5, SD15, SD23, SD40, SD50, SD230
  - Rollei Powerflex 455
  - Samsung SC-D22, SC-D23, SC-D24, SC-D93, SC-D99, SC-D352, SC-D353, SC-D354, SC-D355, SC-D363, SC-D375, SC-D381, SC-D382, SC-D383, SC-D385, SC-D453, SC-D455, SC-D457, SC-D530, SC-D590, SC-D963
  - Samsung SC-D965, SC-D975
  - Samsung SC-DC163, SC-DC164, SC-DC165, SC-DC173, SC-DC175, SC-DC563, SC-DC564, SC-DC565, SC-DC575
  - Samsung SC-DX103, SC-DX105, SC-DX205
  - Samsung SC-L870, SC-L907
  - Samsung SC-MM10S, SC-MM11S, SC-MM12S
  - Samsung SC-X205L, SC-X210L, SC-X220L, SC-X300, SC-X300L
  - Samsung HMX-F80, HMX-F90, HMX-F91, HMX-F800, HMX-F810, HMX-F900, HMX-F910, HMX-F920
  - Samsung HMX-H100, HMX-H104, HMX-H105, HMX-H106, HMX-H200, HMX-H203, HMX-H204, HMX-H205, HMX-H220, HMX-H300, HMX-H303, HMX-H304, HMX-H305, HMX-H320, HMX-H400, HMX-H405, HMX-H1000, HMX-H1052, HMX-H1062
  - Samsung HMX-Q10, HMX-Q100, HMX-Q130
  - Samsung HMX-S10, HMX-S15, HMX-S16
  - Samsung HMX-T10, HMX-T11
  - Samsung HMX-U10, HMX-U100
  - Samsung SC-HMX10, SC-HMX10A, SC-HMX10C, SC-HMX20
  - Samsung SC-MX10, SC-MX20
  - Samsung SMX-C10, SMX-C13, SMX-C14, SMX-C20, SMX-C24, SMX-C100, SMX-C200
  - Samsung SMX-F30, SMX-F33, SMX-F34, SMX-F40, SMX-F43, SMX-F44, SMX-F50, SMX-F70, SMX-F300, SMX-F400, SMX-F530, SMX-F700
  - Samsung SMX-K40, SMX-K44, SMX-K45, SMX-K400, SMX-K442
  - Samsung VP-D21, VP-D23, VP-D24, VP-D26, VP-D103, VP-D105, VP-D107, VP-D230, VP-D250, VP-D270, VP-D301, VP-

- 
- D303, VP-D305, VP-D307, VP-D352, VP-D353, VP-D354, VP-D355, VP-D362, VP-D363, VP-D364, VP-D365, VP-D385(i), VP-D395(i)
- Samsung VP-D453, VP-D454, VP-D455, VP-D463, VP-D467, VP-D530, VP-D590, VP-D653, VP-D655, VP-D963, VP-D964, VP-D965, VP-D6040, VP-D6050
  - Samsung VP-DC163, VP-DC173, VP-DC175, VP-DC435, VP-DC575, VP-DC563, VP-DC565
  - Samsung VP-DX10, VP-DX10H, VP-DX103(i), VP-DX104, VP-DX105(i), VP-DX205(i), VP-DX210(i), VP-DX2050
  - Samsung VP-HMX10, VP-HMX20
  - Samsung VP-MX10, VP-MX20, VP-MX25
  - Samsung VP-M2050, VP-M2100, VP-M2200
  - Samsung VP-MS10, VP-MS11, VP-MS12, VP-MS15
  - Samsung VP-X205L, VP-X210L, VP-X220L
  - Sony Cyber-shot DSC-F77, DSC-F707, DSC-F717, DSC-F828
  - Sony Cyber-shot DSC-FX77
  - Sony Cyber-shot DSC-G1
  - Sony Cyber-shot DSC-H1, DSC-H2, DSC-H5
  - Sony Cyber-shot DSC-L1
  - Sony Cyber-shot DSC-M1, DSC-M2
  - Sony Cyber-shot DSC-P1, DSC-P2, DSC-P3, DSC-P5, DSC-P7, DSC-P8, DSC-P9, DSC-P10, DSC-P20, DSC-P30, DSC-P31, DSC-P32, DSC-P41, DSC-P43, DSC-P50, DSC-P51, DSC-P52, DSC-P71, DSC-P72, DSC-P73, DSC-P92, DSC-P93
  - Sony Cyber-shot DSC-R1
  - Sony Cyber-shot DSC-S40, DSC-S75, DSC-S85, DSC-S500, DSC-S600, DSC-S930
  - Sony Cyber-shot DSC-T7
  - Sony Cyber-shot DSC-U10, DSC-U20, DSC-U30, DSC-U40, DSC-U50, DSC-U60
  - Sony Cyber-shot DSC-V1, DSC-V3
  - Sony Cyber-shot DSC-W1, DSC-W5, DSC-W7, DSC-W12, DSC-W15, DSC-W17, DSC-W30, DSC-W35, DSC-W40
  - Sony DSLR-A230 (Alfa 230)
  - Sony DSLR-A290 (Alfa 290)
  - Sony DSLR-A330 (Alfa 330)
  - Sony DSLR-A380 (Alfa 380)
  - Sony DSLR-A390 (Alfa 390)
  - Sony DSLR-A450 (Alfa 450)
  - Sony DSLR-A500 (Alfa 500)
  - Sony DSLR-A560 (Alfa 560)
  - Sony DSLR-A580 (Alfa 580)
  - Sony NEX-3
  - Sony NEX-5
  - Sony NEX-7
  - Sony NEX-5N
  - Sony NEX-C3
  - Sony SLT-A33 (Alfa 33)
  - Sony SLT-A35 (Alfa 35)
  - Sony SLT-A37 (Alfa 37)
  - Sony SLT-A55 (Alfa 55)
  - Sony SLT-A57 (Alfa 57)
  - Sony SLT-A65 (Alfa 65)
  - Sony SLT-A77 (Alfa 77)
  - Sony SLT-A99 (Alfa 99)
  - Sony DCR-DVD
  - Sony DCR-DVD92, DCR-DVD106, DCR-DVD109, DCR-DVD110, DCR-DVD115, DCR-DVD150, DCR-DVD202, DCR-DVD203/ DCR-DVD306, DCR-DVD310, DCR-DVD403, DCR-DVD404, DCR-DVD405, DCR-DVD406, DCR-DVD408, DCR-DVD410, DCR-DVD450
  - Sony DCR-DVD505, DCR-DVD508, DCR-DVD602, DCR-DVD610, DCR-DVD650, DCR-DVD653/ DCR-DVD703, DCR-DVD710, DCR-DVD803, DCR-DVD805, DCR-DVD808, DCR-DVD810, DCR-DVD850, DCR-DVD908
  - Sony DCR-HC
  - Sony DCR-HC20, DCR-HC21, DCR-HC26, DCR-HC30, DCR-HC32, DCR-HC36, DCR-HC38, DCR-HC40, DCR-HC42, DCR-HC44, DCR-HC46, DCR-HC48
  - Sony DCR-HC53, DCR-HC54, / DCR-HC62, DCR-HC65, DCR-HC85, DCR-HC94, DCR-HC96
  - Sony DCR-PJ
  - Sony DCR-PJ5
  - Sony DCR-SR
  - Sony DCR-SR15, DCR-SR20, DCR-SR21, DCR-SR30, DCR-SR32, DCR-SR33, DCR-SR35, DCR-SR36, DCR-SR37, DCR-SR38
  - Sony DCR-SR40, DCR-SR42, DCR-SR45, DCR-SR46, DCR-SR48, DCR-SR50, DCR-SR52, DCR-SR55, DCR-SR57, DCR-SR58
  - Sony DCR-SR60, DCR-SR62, DCR-SR65, DCR-SR67, DCR-SR68, DCR-SR70, DCR-SR72, DCR-SR75, DCR-SR77, DCR-SR78
  - Sony DCR-SR80, DCR-SR82, DCR-SR85, DCR-SR87, DCR-SR88, DCR-SR90, DCR-SR100, DCR-SR190, DCR-SR200, DCR-SR210, DCR-SR220, DCR-SR290, DCR-SR300
  - Sony DCR-SX
  - Sony DCR-SX15, DCR-SX20, DCR-SX21, DCR-SX22, DCR-SX30, DCR-SX31, DCR-SX33, DCR-SX34, DCR-SX40, DCR-SX41, DCR-SX43, DCR-SX45, DCR-SX50, DCR-SX53, DCR-SX60, DCR-SX63, DCR-SX65, DCR-SX85
  - Sony DEV-3, DEV-5

- 
- Sony HDR-CX
  - Sony HDR-CX6, HDR-CX7, HDR-CX11, HDR-CX12, HDR-CX100, HDR-CX105, HDR-CX106, HDR-CX110, HDR-CX115, HDR-CX116, HDR-CX130, HDR-CX150, HDR-CX155, HDR-CX160, HDR-CX180, HDR-CX190
  - Sony HDR-CX200, HDR-CX210, HDR-CX250, HDR-CX260, HDR-CX270, HDR-CX300, HDR-CX305, HDR-CX350, HDR-CX370, HDR-CX500, HDR-CX505, HDR-CX520, HDR-CX550, HDR-CX560, HDR-CX570, HDR-CX580, HDR-CX690, HDR-CX700, HDR-CX730, HDR-CX740
  - Sony HDR-HC
  - Sony HDR-HC3, HDR-HC9
  - Sony HDR-PJ
  - Sony HDR-PJ200, HDR-PJ260, HDR-PJ600, HDR-PJ740
  - Sony HDR-SR
  - Sony HDR-SR5, HDR-SR7, HDR-SR8, HDR-SR10, HDR-SR11, HDR-SR12
  - Sony HDR-TD
  - Sony HDR-TD10, HDR-T20
  - Sony HDR-UX
  - Sony HDR-UX3, HDR-UX5, HDR-UX7, HDR-UX9, HDR-UX10, HDR-UX19, HDR-UX20
  - Sony HDR-XR
  - Sony HDR-XR100, HDR-XR105, HDR-XR106, HDR-XR150, HDR-XR155, HDR-XR200, HDR-XR260, HDR-XR350, HDR-XR500, HDR-XR520, HDR-XR550
  - Toshiba Camileo B10
  - Toshiba Camileo BW20
  - Toshiba Camileo Clip
  - Toshiba Camileo H10, H20, H30
  - Toshiba Camileo HD
  - Toshiba Camileo P10, P20, P25, P30, P100
  - Toshiba Camileo Pro, Pro HD
  - Toshiba Camileo S10, S20, S30
  - Toshiba Camileo X100, X150, X155, X200, X400, X416, X450
  - Toshiba Camileo Z100
  - Toshiba PDR-M500, PDR-M700