

Dane aktualne na dzień: 26-05-2025 05:16

Link do produktu: <https://sklepvideo.pl/kabel-usb-uc-e6-p-6015.html>



Kabel USB - mini USB UC-E6

Cena	14,90 zł
Dostępność	Dostępny
Czas wysyłki	1-2 dni robocze
Numer katalogowy	ai102390
Kod producenta	8915691
Producent	COM

Opis produktu

Kabel USB do aparatów cyfrowych z gniazdem 8-pin typ Nikon UC-E6, Panasonic K1HA08CD0007, Olympus CB-USB7, Fuji P10NA00990A

Kabel służy do transmisji danych między aparatem i komputerem a także, w niektórych modelach do ładowania akumulatora. Kabel wyposażony jest w filtr ferrytowy i pasuje do aparatów wyposażonych w złącze mini USB 8-pin, którego wygląd przedstawiono na zdjęciu poniżej.



Zastępuje

m.in. kable:

- Fuji P10NA00990A, Type IV, FZ06584-100, FZ06584-101, FZ06585-101, P645-083-1355
- Panasonic K1HA08CD0007, K1HA08CD0013, K1HA08CD0019, K1HY08YY0040
- Konica Minolta USB-2, Konica Minolta USB-3
- Nikon Part # YM080315, UCE6, UC-E6, UC-E16, UC-E17
- Olympus 202059, CB-USB7, P645-083-1355, N2155600
- Pentax I-USB7, I-USB17, I-USB33
- Sony 183306211, 183431111, 319698101, 35618-FF-147
- Sanyo USBMB8P-ROUND06

Data line interface



Camera interface



FOR NIKON SONY OLYMPUS CASIO
PANASONIC FUJI CAMERA

UC-E6 USB Data Cable

Przewód UC-E6 pasuje m.in. do aparatów:

Epson

- PhotoPC 850Z

Fuji

- FinePix 20, 40, 50
- FinePix 100
- FinePix 480
- FinePix 5700
- FinePix 8000, 8100
- FinePix A100, A150, A170, A175
- FinePix A220, A225
- FinePix A850, A860
- FinePix AV100, AV105, AV150
- FinePix AV200, AV230, AV235, AV250, AV280
- FinePix AX200, AX250, AX300, AX330, AX350, AX380
- FinePix AX550
- FinePix F20, F20fd, F20se
- FinePix F30, F30fd, F31, F31fd
- FinePix F40, F40fd, F45, F45fd, F47, F47fd

-
- FinePix F50, F50fd
 - FinePix F60fd
 - FinePix F650
 - FinePix F70EXR, F75EXR
 - FinePix F100, F100fd
 - FinePix F460, F470, F480
 - FinePix F500EXR, F505EXR F600EXR, F650, F660EXR
 - FinePix F770EXR
 - FinePix HS10, HS11
 - FinePix HS20EXR, HS22EXR
 - FinePix J10, J12, J15, J15fd
 - FinePix J20, J26, J27, J28, J29
 - FinePix J30, J32, J35, J37, J38
 - FinePix J40
 - FinePix J50, J50fd
 - FinePix J100, J100w, J110, J110w, J120, J120w, J150, J150w
 - FinePix J210, J250
 - FinePix JV100, JV150
 - FinePix JV200, JV205, JX250, JV255
 - FinePix JV500
 - FinePix JX280, JX290, JX295
 - FinePix JX300, JX305, JX330 JX335, JX350, JX355, JX370, JX390
 - FinePix JX400, JX420, JX440
 - FinePix JX500, JX520, JX530, JX540, JX550, JX580, JX590
 - FinePix JX700, JX710
 - FinePix JZ100, JZ110
 - FinePix JZ250, JZ260
 - FinePix JZ300, JZ305, JZ310, JZ370
 - FinePix JZ500, JZ505
 - FinePix L30, L50, L55
 - FinePix S100FS
 - FinePix S700
 - FinePix S800fd
 - FinePix S1000, S1000fd, S1500fd, S1600fd, S1700fd, S1730fd, S1770fd, S1780 HD, S1800fd, S1850 HD, S1880 HD, S1900fd
 - FinePix S2000, S2000fd, S2000 HD
 - FinePix S2500 HD, S2550 HD, S2600 HD, S2700 HD, S2750 HD, S2800 HD, S2850 HD, S2900 HD, S2940 HD, S2950 HD, S2990 HD, S2995 HD
 - FinePix S3200 HD, S3250 HD, S3300 HD, S3350 HD, S3400 HD, S3450 HD, S3900 HD
 - FinePix S4000 HD, S4050 HD, S4080 HD, S4200 HD, S4300 HD, S4400 HD, S4500 HD, S4530 HD
 - FinePix S5700, S5800
 - FinePix S8000, S8000fd, S8100, S8100fd
 - FinePix T190
 - FinePix T200, T205, T210
 - FinePix T300, T305, T310, T350, T360
 - FinePix T400, T410
 - FinePix T500, T510, T550, T560
 - FinePix XP10, XP20, XP22, XP30, XP60
 - FinePix XP100, XP150, XP170, XP200
 - FinePix Z5
 - FinePix Z10, Z10fd
 - FinePix Z20, Z20fd
 - FinePix Z30, Z30fd, Z31, Z33, Z33fd, Z33sw, Z33wp, Z35, Z37
 - FinePix Z50fd
 - FinePix Z100, Z100fd, Z110, Z115
 - FinePix Z200, Z200fd, Z250fd
 - FinePix Z300
 - FinePix Z700 EXR
 - FinePix Z800 EXR
 - FinePix Z950 EXR
 - FinePix Z1000 EXR, Z1010 EXR
 - Fuji M1
 - Fuji Real 3D W1
 - Fuji Real 3D W3
 - Fuji X10
 - Fuji X100
 - Fuji X-pro 1
 - Fuji X-S1
-

Konica Minolta

- DiMAGE A200
- DiMAGE E323
- DiMAGE E500
- DiMAGE X1 Cradle
- DiMAGE X50
- DiMAGE X60
- DiMAGE Z10
- DiMAGE Z3
- DiMAGE Z5
- DiMAGE Z6
- DiMAGE Z20
- Dynax 5D
- Dynax 7D
- Maxxum 5D
- Maxxum 7D

Nikon

- Coolpix 2100, 2200
- Coolpix 3100, 3200, 3700
- Coolpix 4100, 4200, 4600, 4800
- Coolpix 5200, 5600, 5900
- Coolpix 7600, 7900
- Coolpix 8400, 8800
- Coolpix A10, A100, A300
- Coolpix AW100, AW110
- Coolpix L1, L2, L3, L4, L5, L6
- Coolpix L10, L11, L12, L14, L15, L16, L18, L19
- Coolpix L20, L22, L24, L27, L28, L29
- Coolpix L30, L31, L32
- Coolpix L100, L110, L120
- Coolpix L320, L340
- Coolpix L610, L620
- Coolpix L810, L820, L830
- Coolpix P1, P2, P3, P4
- Coolpix P50, P60, P80, P90
- Coolpix P100, P300, P310, P330, P500, P510, P520, P530
- Coolpix P5000, P5100, P6000, P7000, P7100, P7700, P7800
- Coolpix S4, S9
- Coolpix S10, S70, S80
- Coolpix S100
- Coolpix S200, S203, S210, S220, S230
- Coolpix S500, S510, S520, S560, S570
- Coolpix S600, S620, S630, S640
- Coolpix S710
- Coolpix S800c
- Coolpix S1000pj, S1200pj
- Coolpix S2700, S2900
- Coolpix S3000, S3100, S3200, S3300, S3400, S3500, S3600, S3700
- Coolpix S4000, S4100, S4200, S4300
- Coolpix S5100, S5200
- Coolpix S6000, S6100, S6200, S6300, S6400, S6500, S6800
- Coolpix S8000, S8100, S8200
- Coolpix S9050, S9100, S9200, S9300, S9400, S9500
- Nikon D750
- Nikon D3200, D3300
- Nikon D5000, D5100, D5300, D5500
- Nikon D7100, D7200
- Nikon DF

Olympus

- FE-20, FE-35, FE-45, FE-46, FE-47
- FE-150, FE-160, FE-170, FE-180, FE-190
- FE-210, FE-220, FE-230, FE-235, FE-240, FE-250, FE-270, FE-280, FE-290
- FE-300, FE-310, FE-320, FE-340, FE-350, FE-360, FE-370

-
- FE-3000, FE-3010, FE-4000, FE-4010, FE-4050, FE-5000, FE-5010, FE-5020, FE-5035, FE-5050
 - T-100
 - VG-120, VG-130, VG-140, VG-170
 - VR-310, VR-320, VR-325, VR-330, VR-340, VR-350, VR-360, VR-370 / D-785
 - X-15, X-730, X-785, X-790, X-795, X-800, X-820, X-835, X-845
-

Panasonic

- Audio SVSD300GC
- Audio SVSD350VGH
- Lumix DMC-DZ15
- Lumix DMC-F5
- Lumix DMC-FS3, DMC-FS3A, DMC-FS3P, DMC-FS3S
- Lumix DMC-FS5, DMC-FS5K, DMC-FS5R, DMC-FS5S
- Lumix DMC-FS6
- Lumix DMC-FS7
- Lumix DMC-FS15
- Lumix DMC-FS20, DMC-FS20S
- Lumix DMC-FX01, DMC-FX01, DMC-FX01EB, DMC-FX01EE, DMC-FX01EF, DMC-FX01EG, DMC-FX01EGM, DMC-FX01GC, DMC-FX01GD, DMC-FX01GK, DMC-FX01GN, DMC-FX01GT, DMC-FX01P, DMC-FX01PL, DMC-FX01PP, DMC-FX01S, DMC-FX01SG
- Lumix DMC-FX07, DMC-FX07, DMC-FX07K, DMC-FX07PP, DMC-FX07PP, DMC-FX07R, DMC-FX07T
- Lumix DMC-FX2, DMC-FX3, DMC-FX7, DMC-FX8, DMC-FX9
- Lumix DMC-FX10, DMC-FX12, DMC-FX15
- Lumix DMC-FX30, DMC-FX33, DMC-FX35, DMC-FX35A, DMC-FX35K, DMC-FX35S, DMC-FX36, DMC-FX37, DMC-FX38
- Lumix DMC-FX50, DMC-FX50PP, DMC-FX55, DMC-FX55P
- Lumix DMC-FX100, DMC-FX100P, DMC-FX100P, DMC-FX150, DMC-FX180
- Lumix DMC-FX500, DMC-FX520, DMC-FX580
- Lumix DMC-FZ1, DMC-FZ2, DMC-FZ3, DMC-FZ4, DMC-FZ5, DMC-FZ7, DMC-FZ7EB, DMC-FZ7EE, DMC-FZ7EF, DMC-FZ7EG, DMC-FZ7EGM, DMC-FZ7GC, DMC-FZ7GD, DMC-FZ7GK, DMC-FZ7GN, DMC-FZ7GT, DMC-FZ7PL, DMC-FZ7PP, DMC-FZ7S, DMC-FZ7SG, DMC-FZ8
- Lumix DMC-FZ10, DMC-FZ15, DMC-FZ18
- Lumix DMC-FZ20, DMC-FZ25, DMC-FZ28
- Lumix DMC-FZ30, DMC-FZ30EB, DMC-FZ30EG, DMC-FZ30EGM, DMC-FZ30GC, DMC-FZ30GD, DMC-FZ30GK, DMC-FZ30GN, DMC-FZ30GT, DMC-FZ30K, DMC-FZ30PL, DMC-FZ30PP, DMC-FZ30S, DMC-FZ30SG
- Lumix DMC-FZ50
- Lumix DMC-G1
- Lumix DMC-GX1, DMC-GX7, DMC-GX8
- Lumix DMC-L10, DMC-L10K, DMC-L10KEB/K
- Lumix DMC-LS1
- Lumix DMC-LS2, DMC-LS2EB, DMC-LS2EE, DMC-LS2EF, DMC-LS2EG, DMC-LS2EGM, DMC-LS2GC, DMC-LS2GK, DMC-LS2GN, DMC-LS2GT, DMC-LS2PL, DMC-LS2PP, DMC-LS2SG
- Lumix DMC-LS3, DMC-LS3EF, DMC-LS3EG, DMC-LS3EGM
- Lumix DMC-LS5, DMC-LS5E, DMC-LS5EE, DMC-LS5GC, DMC-LS5GF, DMC-LS5GN, DMC-LS5GW, DMC-LS5P, DMC-LS5PU
- Lumix DMC-LS6
- Lumix DMC-LS60, DMC-LS65
- Lumix DMC-LS70, DMC-LS75
- Lumix DMC-LS80, DMC-LS85
- Lumix DMC-LX1, DMC-LX1, DMC-LX1K, DMC-LX1PP, DMC-LX1S
- Lumix DMC-LX2, DMC-LX3
- Lumix DMC-LZ1, DMC-LZ2
- Lumix DMC-LZ3, DMC-LZ3EB, DMC-LZ3EE, DMC-LZ3EF, DMC-LZ3EG, DMC-LZ3EGM, DMC-LZ3GC, DMC-LZ3GK, DMC-LZ3GN, DMC-LZ3GT, DMC-LZ3PL, DMC-LZ3PP
- Lumix DMC-LZ4, DMC-LZ4EB, DMC-LZ4EG, DMC-LZ4PP
- Lumix DMC-LZ5, DMC-LZ5EB, DMC-LZ5EE, DMC-LZ5EF, DMC-LZ5EG, DMC-LZ5EGM, DMC-LZ5GC, DMC-LZ5GK, DMC-LZ5GN, DMC-LZ5GT, DMC-LZ5PL, DMC-LZ5PP, DMC-LZ5SE, DMC-LZ5SEPP, DMC-LZ5SG
- Lumix DMC-LZ6, DMC-LZ7, DMC-LZ8, DMC-LZ8K, DMC-LZ8S
- Lumix DMC-LZ10, DMC-LZ10K, DMC-LZ10S
- Lumix DMC-SD4090
- Lumix DMC-SD5000
- Lumix DMC-SZ3, DMC-SZ5, DMC-SZ7, DMC-SZ9, DMC-SZ10, DMC-SZ20, DMC-SZ25, DMC-SZ30
- Lumix DMC-TZ1, DMC-TZ1A, DMC-TZ1K, DMC-TZ1PP, DMC-TZ1S
- Lumix DMC-TZ2
- Lumix DMC-TZ3, DMC-TZ3S,
- Lumix DMC-TZ4, DMC-TZ4K, DMC-TZ4S
- Lumix DMC-TZ5, DMC-TZ5A
- Lumix DMC-TZ11, DMC-TZ15
- Lumix DMC-TZ24, DMC-TZ25, DMC-TZ27
- Lumix DMC-TZ30, DMC-TZ31, DMC-TZ35, DMC-TZ36, DMC-TZ37

-
- Lumix DMC-TZ40, DMC-TZ41
 - Lumix DMC-TZ50, DMC-TZ50P, DMC-TZ55, DMC-TZ56, DMC-TZ57, DMC-TZ58
 - Lumix DMC-TZ60, DMC-TZ61
 - Lumix DMC-TZ70, DMC-TZ71

Pentax

- *ist DL
- *ist DS
- *ist DS2
- K-7
- K10D
- K20D
- K100D, K100D Super
- K110D
- K200D
- K2000 (K-m)
- Optio 33WR, 43WR, 430RS
- Optio 50, 50L, 60
- Optio 450, 550, 750Z
- Optio A10, A20, A30, A40
- Optio E10, E20, E30, E40, E50, E60, E70L, E75, E80
- Optio L20, L50
- Optio M4, M10, M20, M30, M40, M50, M60
- Optio MX, MX4
- Optio P70, P80
- Optio S
- Optio S4, S4i, S5i, S5n, S5z, S6, S7
- Optio S10, S12, S40, S45, S50, S55, S60
- Optio SV, SVi
- Optio T10, T20, T30
- Optio V10, V20
- Optio W10, W20, W30, W60, W80
- Optio WP, WPi
- Optio WS80
- Optio X
- Optio X70
- Optio Z10

Sanyo

- VPC-E1500TP
- Xacti VPC-E6, VPC-E7
- Xacti VPC-E10, VPC-E60
- Xacti VPC-S6, VPC-S7
- Xacti VPC-S50, VPC-S60, VPC-S70
- Xacti VPC-S500

Praktica

DCZ 10.3, 12.Z4, 14.1, 14.2, 14.Z4, 4.4, 5.4, 5.5, 5.8, 7.4, DPix 1000Z, 1100Z, DVC 14.1 HDMI, 5.6 FHD

Praktica Luxmedia

10-03, 10-23, 12-03, 12-04, 12-23, 12-Z4, 12-Z4TS, 12-Z5, 14-04, 14-05, 14-Z4, 14-Z4TS, 14-Z5, 14-Z50, 14-Z50S, 14-Z51, 14-Z80S, 16-Z12S, 16-Z21C, 16-Z21S, 16-Z24S, 16-Z26S, 16-Z51, 16-Z52, 18-Z36C, 6503, 8403, 8503

Sony

- Alpha DSLR-A100, DSLR-A100K
- Alpha DSLR-A200, DSLR-A200K
- Alpha DSLR-A300
- Alpha DSLR-A330
- Alpha DSLR-A350
- Alpha DSLR-A380
- Alpha DSLR-A500
- Alpha DSLR-A550
- Alpha DSLR-A700

-
- Alpha DSLR-A850
 - Alpha DSLR-A900
 - Cybershot DSC-W180, DSC-W190, DSC-W190R

a także:

Rollei Flexline 140, Movieline DV5, Movieline P30, Powerflex 210 HD, 240 HD, 460, Sportsline 60, X-8 Compact, XS-8, XS-10, XS-10 in TOUCH **Ricoh** GR **Sigma** DP1, DP1 Merrill, DP1s, DP1x, DP2, DP2 Merrill, DP2s, DP2x, DP3 Merrill, SD1, SD1 Merrill
Toshiba Camileo SX500, SX900

