

Dane aktualne na dzień: 16-05-2025 10:00

Link do produktu: <https://sklepvideo.pl/kabel-usb-uc-e6-p-6015.html>



Kabel USB - mini USB UC-E6

Cena	14,90 zł
Dostępność	Dostępny
Czas wysyłki	1-2 dni robocze
Numer katalogowy	ai102390
Kod producenta	8915691
Producent	COM

Opis produktu

Kabel USB do aparatów cyfrowych z gniazdem 8-pin

Zastępuje m.in. kable:

- Fuji P10NA00990A, Type IV, FZ06584-100, FZ06584-101, FZ06585-101
- Panasonic K1HA08CD0007, K1HA08CD0013, K1HA08CD0019, K1HY08YY0040
- Konica Minolta USB-2, Konica Minolta USB-3
- Nikon Part # YM080315, UCE6, UC-E6, UC-E16, UC-E17
- Olympus 202059, CB-USB7, P645-083-1355, N2155600
- Pentax I-USB7, I-USB17, I-USB33
- Sony 183306211, 183431111, 319698101, 35618-FF-147
- Sanyo USBMB8P-ROUND06

Pasuje m.in. do aparatów:

Epson

- Epson PhotoPC 850Z

Fuji

- Fuji FinePix 20
- Fuji FinePix 40
- Fuji FinePix 50
- Fuji FinePix 100
- Fuji FinePix 480
- Fuji FinePix 5700
- Fuji FinePix 8000
- Fuji FinePix 8100
- Fuji FinePix A100
- Fuji FinePix A150
- Fuji FinePix A170
- Fuji FinePix A175
- Fuji FinePix A220
- Fuji FinePix A225
- Fuji FinePix A850
- Fuji FinePix A860
- Fuji FinePix AV100
- Fuji FinePix AV105
- Fuji FinePix AV150
- Fuji FinePix AV200
- Fuji FinePix AV230
- Fuji FinePix AV235
- Fuji FinePix AV250

-
- Fuji FinePix AV280
 - Fuji FinePix AX200
 - Fuji FinePix AX250
 - Fuji FinePix AX300
 - Fuji FinePix AX330
 - Fuji FinePix AX350
 - Fuji FinePix AX380
 - Fuji FinePix AX550
 - Fuji FinePix F20, F20fd, F20se
 - Fuji FinePix F30, F30fd
 - Fuji FinePix F31, F31fd
 - Fuji FinePix F40, F40fd
 - Fuji FinePix F45, F45fd
 - Fuji FinePix F47, F47fd
 - Fuji FinePix F50, F50fd
 - Fuji FinePix F60fd
 - Fuji FinePix F650
 - Fuji FinePix F70EXR
 - Fuji FinePix F75EXR
 - Fuji FinePix F100, F100fd
 - Fuji FinePix F460
 - Fuji FinePix F470
 - Fuji FinePix F480
 - Fuji FinePix F500EXR
 - Fuji FinePix F505EXR
 - Fuji FinePix F600EXR
 - Fuji FinePix F650
 - Fuji FinePix F660EXR
 - Fuji FinePix F770EXR
 - Fuji FinePix HS10
 - Fuji FinePix HS11
 - Fuji FinePix HS20EXR
 - Fuji FinePix HS22EXR
 - Fuji FinePix J10
 - Fuji FinePix J12
 - Fuji FinePix J15, J15fd
 - Fuji FinePix J20
 - Fuji FinePix J26
 - Fuji FinePix J27
 - Fuji FinePix J28
 - Fuji FinePix J29
 - Fuji FinePix J30
 - Fuji FinePix J32
 - Fuji FinePix J35
 - Fuji FinePix J37
 - Fuji FinePix J38
 - Fuji FinePix J40
 - Fuji FinePix J50, J50fd
 - Fuji FinePix J100, J100w
 - Fuji FinePix J110, J110w
 - Fuji FinePix J120, J120w
 - Fuji FinePix J150, J150w
 - Fuji FinePix J210
 - Fuji FinePix J250
 - Fuji FinePix JV100
 - Fuji FinePix JV150
 - Fuji FinePix JV200
 - Fuji FinePix JV205
 - Fuji FinePix JX250
 - Fuji FinePix JV255
 - Fuji FinePix JV500
 - Fuji FinePix JX280
 - Fuji FinePix JX290
 - Fuji FinePix JX295
 - Fuji FinePix JX300
 - Fuji FinePix JX305
 - Fuji FinePix JX330
 - Fuji FinePix JX335
 - Fuji FinePix JX350

-
- Fuji FinePix JX355
 - Fuji FinePix JX370
 - Fuji FinePix JX390
 - Fuji FinePix JX400
 - Fuji FinePix JX420
 - Fuji FinePix JX440
 - Fuji FinePix JX500
 - Fuji FinePix JX520
 - Fuji FinePix JX530
 - Fuji FinePix JX540
 - Fuji FinePix JX550
 - Fuji FinePix JX580
 - Fuji FinePix JX590
 - Fuji FinePix JX700
 - Fuji FinePix JX710
 - Fuji FinePix JZ100
 - Fuji FinePix JZ110
 - Fuji FinePix JZ250
 - Fuji FinePix JZ260
 - Fuji FinePix JZ300
 - Fuji FinePix JZ305
 - Fuji FinePix JZ310
 - Fuji FinePix JZ370
 - Fuji FinePix JZ500
 - Fuji FinePix JZ505
 - Fuji FinePix L30
 - Fuji FinePix L50
 - Fuji FinePix L55
 - Fuji FinePix S100FS
 - Fuji FinePix S700
 - Fuji FinePix S800fd
 - Fuji FinePix S1000, S1000fd
 - Fuji FinePix S1500fd
 - Fuji FinePix S1600fd
 - Fuji FinePix S1700fd
 - Fuji FinePix S1730fd
 - Fuji FinePix S1770fd
 - Fuji FinePix S1780 HD
 - Fuji FinePix S1800fd
 - Fuji FinePix S1850 HD
 - Fuji FinePix S1880 HD
 - Fuji FinePix S1900fd
 - Fuji FinePix S2000, S2000fd, S2000 HD
 - Fuji FinePix S2500 HD
 - Fuji FinePix S2550 HD
 - Fuji FinePix S2600 HD
 - Fuji FinePix S2700 HD
 - Fuji FinePix S2750 HD
 - Fuji FinePix S2800 HD
 - Fuji FinePix S2850 HD
 - Fuji FinePix S2900 HD
 - Fuji FinePix S2940 HD
 - Fuji FinePix S2950 HD
 - Fuji FinePix S2990 HD
 - Fuji FinePix S2995 HD
 - Fuji FinePix S3200 HD
 - Fuji FinePix S3250 HD
 - Fuji FinePix S3300 HD
 - Fuji FinePix S3350 HD
 - Fuji FinePix S3400 HD
 - Fuji FinePix S3450 HD
 - Fuji FinePix S3900 HD
 - Fuji FinePix S4000 HD
 - Fuji FinePix S4050 HD
 - Fuji FinePix S4080 HD
 - Fuji FinePix S4200 HD
 - Fuji FinePix S4300 HD
 - Fuji FinePix S4400 HD
 - Fuji FinePix S4500 HD

-
- Fuji FinePix S4530 HD
 - Fuji FinePix S5700
 - Fuji FinePix S5800
 - Fuji FinePix S8000, S8000fd
 - Fuji FinePix S8100, S8100fd
 - Fuji FinePix T190
 - Fuji FinePix T200
 - Fuji FinePix T205
 - Fuji FinePix T210
 - Fuji FinePix T300
 - Fuji FinePix T305
 - Fuji FinePix T310
 - Fuji FinePix T350
 - Fuji FinePix T360
 - Fuji FinePix T400
 - Fuji FinePix T410
 - Fuji FinePix T500
 - Fuji FinePix T510
 - Fuji FinePix T550
 - Fuji FinePix T560
 - Fuji X10
 - Fuji X100
 - Fuji X-pro 1
 - Fuji X-S1
 - Fuji FinePix XP10
 - Fuji FinePix XP20
 - Fuji FinePix XP22
 - Fuji FinePix XP30
 - Fuji FinePix XP60
 - Fuji FinePix XP100
 - Fuji FinePix XP150
 - Fuji FinePix XP170
 - Fuji FinePix XP200
 - Fuji FinePix Z5
 - Fuji FinePix Z10, Z10fd
 - Fuji FinePix Z20, Z20fd
 - Fuji FinePix Z30, Z30fd
 - Fuji FinePix Z31
 - Fuji FinePix Z33, Z33fd, Z33sw, Z33wp
 - Fuji FinePix Z35
 - Fuji FinePix Z37
 - Fuji FinePix Z50fd
 - Fuji FinePix Z100, Z100fd
 - Fuji FinePix Z110
 - Fuji FinePix Z115
 - Fuji FinePix Z200, Z200fd
 - Fuji FinePix Z250fd
 - Fuji FinePix Z300
 - Fuji FinePix Z700 EXR
 - Fuji FinePix Z800 EXR
 - Fuji FinePix Z950 EXR
 - Fuji FinePix Z1000 EXR
 - Fuji FinePix Z1010 EXR
 - Fuji M1
 - Fuji Real 3D W1
 - Fuji Real 3D W3

Konica Minolta

- DiMAGE A200
- DiMAGE E323
- DiMAGE E500
- DiMAGE X1 Cradle
- DiMAGE X50
- DiMAGE X60
- DiMAGE Z10
- DiMAGE Z3
- DiMAGE Z5
- DiMAGE Z6

-
- DiMAGE Z20
 - Dynax 5D
 - Dynax 7D
 - Maxxum 5D
 - Maxxum 7D

Nikon

- Nikon Coolpix 2100
- Nikon Coolpix 2200
- Nikon Coolpix 3100
- Nikon Coolpix 3200
- Nikon Coolpix 3700
- Nikon Coolpix 4100
- Nikon Coolpix 4200
- Nikon Coolpix 4600
- Nikon Coolpix 4800
- Nikon Coolpix 5200
- Nikon Coolpix 5600
- Nikon Coolpix 5900
- Nikon Coolpix 7600
- Nikon Coolpix 7900
- Nikon Coolpix 8400
- Nikon Coolpix 8800
- Nikon Coolpix A10
- Nikon Coolpix A100
- Nikon Coolpix A300
- Nikon Coolpix AW100
- Nikon Coolpix AW110
- Nikon Coolpix L1
- Nikon Coolpix L2
- Nikon Coolpix L3
- Nikon Coolpix L4
- Nikon Coolpix L5
- Nikon Coolpix L6
- Nikon Coolpix L10
- Nikon Coolpix L11
- Nikon Coolpix L12
- Nikon Coolpix L14
- Nikon Coolpix L15
- Nikon Coolpix L16
- Nikon Coolpix L18
- Nikon Coolpix L19
- Nikon Coolpix L20
- Nikon Coolpix L22
- Nikon Coolpix L24
- Nikon Coolpix L27
- Nikon Coolpix L28
- Nikon Coolpix L29
- Nikon Coolpix L30
- Nikon Coolpix L31
- Nikon Coolpix L32
- Nikon Coolpix L100
- Nikon Coolpix L110
- Nikon Coolpix L120
- Nikon Coolpix L320
- Nikon Coolpix L340
- Nikon Coolpix L610
- Nikon Coolpix L620
- Nikon Coolpix L810
- Nikon Coolpix L820
- Nikon Coolpix L830
- Nikon Coolpix P1
- Nikon Coolpix P2
- Nikon Coolpix P3
- Nikon Coolpix P4
- Nikon Coolpix P50
- Nikon Coolpix P60
- Nikon Coolpix P80

-
- Nikon Coolpix P90
 - Nikon Coolpix P100
 - Nikon Coolpix P300
 - Nikon Coolpix P310
 - Nikon Coolpix P330
 - Nikon Coolpix P500
 - Nikon Coolpix P510
 - Nikon Coolpix P520
 - Nikon Coolpix P530
 - Nikon Coolpix P5000
 - Nikon Coolpix P5100
 - Nikon Coolpix P6000
 - Nikon Coolpix P7000
 - Nikon Coolpix P7100
 - Nikon Coolpix P7700
 - Nikon Coolpix P7800
 - Nikon Coolpix S4
 - Nikon Coolpix S9
 - Nikon Coolpix S10
 - Nikon Coolpix S70
 - Nikon Coolpix S80
 - Nikon Coolpix S100
 - Nikon Coolpix S200
 - Nikon Coolpix S203
 - Nikon Coolpix S210
 - Nikon Coolpix S220
 - Nikon Coolpix S230
 - Nikon Coolpix S500
 - Nikon Coolpix S510
 - Nikon Coolpix S520
 - Nikon Coolpix S560
 - Nikon Coolpix S570
 - Nikon Coolpix S600
 - Nikon Coolpix S620
 - Nikon Coolpix S630
 - Nikon Coolpix S640
 - Nikon Coolpix S710
 - Nikon Coolpix S800c
 - Nikon Coolpix S1000pj
 - Nikon Coolpix S1200pj
 - Nikon Coolpix S2700
 - Nikon Coolpix S2900
 - Nikon Coolpix S3000
 - Nikon Coolpix S3100
 - Nikon Coolpix S3200
 - Nikon Coolpix S3300
 - Nikon Coolpix S3400
 - Nikon Coolpix S3500
 - Nikon Coolpix S3600
 - Nikon Coolpix S3700
 - Nikon Coolpix S4000
 - Nikon Coolpix S4100
 - Nikon Coolpix S4200
 - Nikon Coolpix S4300
 - Nikon Coolpix S5100
 - Nikon Coolpix S5200
 - Nikon Coolpix S6000
 - Nikon Coolpix S6100
 - Nikon Coolpix S6200
 - Nikon Coolpix S6300
 - Nikon Coolpix S6400
 - Nikon Coolpix S6500
 - Nikon Coolpix S6800
 - Nikon Coolpix S8000
 - Nikon Coolpix S8100
 - Nikon Coolpix S8200
 - Nikon Coolpix S9050
 - Nikon Coolpix S9100
 - Nikon Coolpix S9200

-
- Nikon Coolpix S9300
 - Nikon Coolpix S9400
 - Nikon Coolpix S9500
 - Nikon D750
 - Nikon D3200
 - Nikon D3300
 - Nikon D5000
 - Nikon D5100
 - Nikon D5300
 - Nikon D5500
 - Nikon D7100
 - Nikon D7200
 - Nikon DF

Olympus

- Olympus FE-20
- Olympus FE-35
- Olympus FE-45
- Olympus FE-46
- Olympus FE-47
- Olympus FE-150
- Olympus FE-160
- Olympus FE-170
- Olympus FE-180
- Olympus FE-190
- Olympus FE-210
- Olympus FE-220
- Olympus FE-230
- Olympus FE-235
- Olympus FE-240
- Olympus FE-250
- Olympus FE-270
- Olympus FE-280
- Olympus FE-290
- Olympus FE-300
- Olympus FE-310
- Olympus FE-320
- Olympus FE-340
- Olympus FE-350
- Olympus FE-360
- Olympus FE-370
- Olympus FE-3000
- Olympus FE-3010
- Olympus FE-4000
- Olympus FE-4010
- Olympus FE-4050
- Olympus FE-5000
- Olympus FE-5010
- Olympus FE-5020
- Olympus FE-5035
- Olympus FE-5050
- Olympus T-100
- Olympus VG-120
- Olympus VG-130
- Olympus VG-140
- Olympus VG-170
- Olympus VR-310
- Olympus VR-320
- Olympus VR-325
- Olympus VR-330
- Olympus VR-340
- Olympus VR-350
- Olympus VR-360
- Olympus VR-370 / D-785
- Olympus X-15
- Olympus X-730
- Olympus X-785
- Olympus X-790

-
- Olympus X-795
 - Olympus X-800
 - Olympus X-820
 - Olympus X-835
 - Olympus X-845

Panasonic

- Audio SVSD300GC
- Audio SVSD350VGH
- Lumix DMC-DZ15
- Lumix DMC-F5
- Lumix DMC-FS3, DMC-FS3A, DMC-FS3P, DMC-FS3S
- Lumix DMC-FS5, DMC-FS5K, DMC-FS5R, DMC-FS5S
- Lumix DMC-FS6
- Lumix DMC-FS7
- Lumix DMC-FS15
- Lumix DMC-FS20, DMCFS20S
- Lumix DMC-FX01, DMC-FX01, DMC-FX01EB, DMC-FX01EE, DMC-FX01EF, DMC-FX01EG, DMC-FX01EGM, DMC-FX01GC, DMC-FX01GD, DMC-FX01GK, DMC-FX01GN, DMC-FX01GT, DMC-FX01P, DMC-FX01PL, DMC-FX01PP, DMC-FX01S, DMC-FX01SG
- Panasonic Lumix DMC-FX07, DMC-FX07, DMC-FX07K, DMC-FX07PP, DMC-FX07PP, DMC-FX07R, DMC-FX07T
- Panasonic Lumix DMC-FX2
- Panasonic Lumix DMC-FX3
- Panasonic Lumix DMC-FX7
- Panasonic Lumix DMC-FX8
- Panasonic Lumix DMC-FX9
- Panasonic Lumix DMC-FX10
- Panasonic Lumix DMC-FX12
- Panasonic Lumix DMC-FX15
- Panasonic Lumix DMC-FX30
- Panasonic Lumix DMC-FX33
- Panasonic Lumix DMC-FX35, DMC-FX35A, DMC-FX35K, DMC-FX35S
- Panasonic Lumix DMC-FX36
- Panasonic Lumix DMC-FX37
- Panasonic Lumix DMC-FX38
- Panasonic Lumix DMC-FX50, DMC-FX50PP
- Panasonic Lumix DMC-FX55, DMC-FX55P
- Panasonic Lumix DMC-FX100, DMC-FX100P, DMC-FX100P
- Panasonic Lumix DMC-FX150
- Panasonic Lumix DMC-FX180
- Panasonic Lumix DMC-FX500
- Panasonic Lumix DMC-FX520
- Panasonic Lumix DMC-FX580
- Panasonic Lumix DMC-FZ1
- Panasonic Lumix DMC-FZ2
- Panasonic Lumix DMC-FZ3
- Panasonic Lumix DMC-FZ4
- Panasonic Lumix DMC-FZ5
- Panasonic Lumix DMC-FZ7, DMC-FZ7EB, DMC-FZ7EE, DMC-FZ7EF, DMC-FZ7EG, DMC-FZ7EGM, DMC-FZ7GC, DMC-FZ7GD, DMC-FZ7GK, DMC-FZ7GN, DMC-FZ7GT, DMC-FZ7PL, DMC-FZ7PP, DMC-FZ7S, DMC-FZ7SG
- Panasonic Lumix DMC-FZ8
- Panasonic Lumix DMC-FZ10
- Panasonic Lumix DMC-FZ15
- Panasonic Lumix DMC-FZ18
- Panasonic Lumix DMC-FZ20
- Panasonic Lumix DMC-FZ25
- Panasonic Lumix DMC-FZ28
- Panasonic Lumix DMC-FZ30, DMC-FZ30EB, DMC-FZ30EG, DMC-FZ30EGM, DMC-FZ30GC, DMC-FZ30GD, DMC-FZ30GK, DMC-FZ30GN, DMC-FZ30GT, DMC-FZ30K, DMC-FZ30PL, DMC-FZ30PP, DMC-FZ30S, DMC-FZ30SG
- Panasonic Lumix DMC-FZ50
- Panasonic Lumix DMC-G1
- Panasonic Lumix DMC-GX1
- Panasonic Lumix DMC-GX7
- Panasonic Lumix DMC-GX8
- Panasonic Lumix DMC-L10, DMC-L10K, DMC-L10KEB/K
- Panasonic Lumix DMC-LS1
- Panasonic Lumix DMC-LS2, DMC-LS2EB, DMC-LS2EE, DMC-LS2EF, DMC-LS2EG, DMC-LS2EGM, DMC-LS2GC, DMC-LS2GK, DMC-LS2GN, DMC-LS2GT, DMC-LS2PL, DMC-LS2PP, DMC-LS2SG

-
- Panasonic Lumix DMC-LS3, DMC-LS3EF, DMC-LS3EG, DMC-LS3EGM
 - Panasonic Lumix DMC-LS5, DMC-LS5E, DMC-LS5EE, DMC-LS5GC, DMC-LS5GF, DMC-LS5GN, DMC-LS5GW, DMC-LS5P, DMC-LS5PU
 - Panasonic Lumix DMC-LS6
 - Panasonic Lumix DMC-LS60
 - Panasonic Lumix DMC-LS65
 - Panasonic Lumix DMC-LS70
 - Panasonic Lumix DMC-LS75
 - Panasonic Lumix DMC-LS80
 - Panasonic Lumix DMC-LS85
 - Panasonic Lumix DMCLX1
 - Panasonic Lumix DMC-LX1
 - Panasonic Lumix DMC-LX1K
 - Panasonic Lumix DMCLX1PP
 - Panasonic Lumix DMC-LX1S
 - Panasonic Lumix DMC-LX2
 - Panasonic Lumix DMC-LX3
 - Panasonic Lumix DMC-LZ1
 - Panasonic Lumix DMC-LZ2
 - Panasonic Lumix DMC-LZ3, DMC-LZ3EB, DMC-LZ3EE, DMC-LZ3EF, DMC-LZ3EG, DMC-LZ3EGM, DMC-LZ3GC, DMC-LZ3GK, DMC-LZ3GN, DMC-LZ3GT, DMC-LZ3PL, DMC-LZ3PP
 - Panasonic Lumix DMC-LZ4, DMC-LZ4EB, DMC-LZ4EG, DMC-LZ4PP
 - Panasonic Lumix DMC-LZ5, DMC-LZ5EB, DMC-LZ5EE, DMC-LZ5EF, DMC-LZ5EG, DMC-LZ5EGM, DMC-LZ5GC, DMC-LZ5GK, DMC-LZ5GN, DMC-LZ5GT, DMC-LZ5PL, DMC-LZ5PP, DMC-LZ5SE, DMC-LZ5SEPP, DMC-LZ5SG
 - Panasonic Lumix DMC-LZ6
 - Panasonic Lumix DMC-LZ7
 - Panasonic Lumix DMC-LZ8, DMC-LZ8K, DMC-LZ8S
 - Panasonic Lumix DMC-LZ10, DMC-LZ10K, DMC-LZ10S
 - Panasonic Lumix DMC-SD4090
 - Panasonic Lumix DMC-SD5000
 - Panasonic Lumix DMC-SZ3
 - Panasonic Lumix DMC-SZ5
 - Panasonic Lumix DMC-SZ7
 - Panasonic Lumix DMC-SZ9
 - Panasonic Lumix DMC-SZ10
 - Panasonic Lumix DMC-SZ20
 - Panasonic Lumix DMC-SZ25
 - Panasonic Lumix DMC-SZ30
 - Panasonic Lumix DMC-TZ1, DMC-TZ1A, DMC-TZ1K, DMC-TZ1PP, DMC-TZ1S
 - Panasonic Lumix DMC-TZ2
 - Panasonic Lumix DMC-TZ3, DMCTZ3S,
 - Panasonic Lumix DMC-TZ4, DMC-TZ4K, DMC-TZ4S
 - Panasonic Lumix DMC-TZ5, DMC-TZ5A
 - Panasonic Lumix DMC-TZ11
 - Panasonic Lumix DMC-TZ15
 - Panasonic Lumix DMC-TZ24
 - Panasonic Lumix DMC-TZ25
 - Panasonic Lumix DMC-TZ27
 - Panasonic Lumix DMC-TZ30
 - Panasonic Lumix DMC-TZ31
 - Panasonic Lumix DMC-TZ35
 - Panasonic Lumix DMC-TZ36
 - Panasonic Lumix DMC-TZ37
 - Panasonic Lumix DMC-TZ40
 - Panasonic Lumix DMC-TZ41
 - Panasonic Lumix DMC-TZ50
 - Panasonic Lumix DMC-TZ50P
 - Panasonic Lumix DMC-TZ55
 - Panasonic Lumix DMC-TZ56
 - Panasonic Lumix DMC-TZ57
 - Panasonic Lumix DMC-TZ58
 - Panasonic Lumix DMC-TZ60
 - Panasonic Lumix DMC-TZ61
 - Panasonic Lumix DMC-TZ70
 - Panasonic Lumix DMC-TZ71

Pentax

- Pentax *ist DL

-
- Pentax *ist DS
 - Pentax *ist DS2
 - Pentax K-7
 - Pentax K10D
 - Pentax K20D
 - Pentax K100D, K100D Super
 - Pentax K110D
 - Pentax K2000 (K-m)
 - Pentax K200D
 - Pentax Optio 33WR
 - Pentax Optio 430RS, 43WR
 - Pentax Optio 50, 50L
 - Pentax Optio 60
 - Pentax Optio 450
 - Pentax Optio 550
 - Pentax Optio 750Z
 - Pentax Optio A10
 - Pentax Optio A20
 - Pentax Optio A30
 - Pentax Optio A40
 - Pentax Optio E10
 - Pentax Optio E20
 - Pentax Optio E30
 - Pentax Optio E40
 - Pentax Optio E50
 - Pentax Optio E60
 - Pentax Optio E70L
 - Pentax Optio E75
 - Pentax Optio E80
 - Pentax Optio L20
 - Pentax Optio L50
 - Pentax Optio M4
 - Pentax Optio M10
 - Pentax Optio M20
 - Pentax Optio M30
 - Pentax Optio M40
 - Pentax Optio M50
 - Pentax Optio M60
 - Pentax Optio MX
 - Pentax Optio MX4
 - Pentax Optio P70
 - Pentax Optio P80
 - Pentax Optio S
 - Pentax Optio S10
 - Pentax Optio S12
 - Pentax Optio S4
 - Pentax Optio S4i
 - Pentax Optio S5i
 - Pentax Optio S5n
 - Pentax Optio S5z
 - Pentax Optio S6
 - Pentax Optio S7
 - Pentax Optio S40
 - Pentax Optio S45
 - Pentax Optio S50
 - Pentax Optio S55
 - Pentax Optio S60
 - Pentax Optio SV
 - Pentax Optio SVi
 - Pentax Optio T10
 - Pentax Optio T20
 - Pentax Optio T30
 - Pentax Optio V10
 - Pentax Optio V20
 - Pentax Optio W10
 - Pentax Optio W20
 - Pentax Optio W30
 - Pentax Optio W60
 - Pentax Optio W80

-
- Pentax Optio WP
 - Pentax Optio WPi
 - Pentax Optio WS80
 - Pentax Optio X
 - Pentax Optio X70
 - Pentax Optio Z10

Sanyo

- Sanyo Xacti VPC-E6
- Sanyo Xacti VPC-E7
- Sanyo Xacti VPC-E10
- Sanyo Xacti VPC-E60

VPC-E1500TP

- Sanyo Xacti VPC-S6
- Sanyo Xacti VPC-S7
- Sanyo Xacti VPC-S50
- Sanyo Xacti VPC-S60
- Sanyo Xacti VPC-S70
- Sanyo Xacti VPC-S500

Praktica

DCZ 10.3, 12.Z4, 14.1, 14.2, 14.Z4, 4.4, 5.4, 5.5, 5.8, 7.4, DPix 1000Z, 1100Z, DVC 14.1 HDMI, 5.6 FHD

Praktica Luxmedia

10-03, 10-23, 12-03, 12-04, 12-23, 12-Z4, 12-Z4TS, 12-Z5, 14-04, 14-05, 14-Z4, 14-Z4TS, 14-Z5, 14-Z50, 14-Z50S, 14-Z51, 14-Z80S, 16-Z12S, 16-Z21C, 16-Z21S, 16-Z24S, 16-Z26S, 16-Z51, 16-Z52, 18-Z36C, 6503, 8403, 8503

Sony

- Sony Alpha DSLR-A100, DSLR-A100K
- Sony Alpha DSLR-A200, DSLR-A200K
- Sony Alpha DSLR-A300
- Sony Alpha DSLR-A330
- Sony Alpha DSLR-A350
- Sony Alpha DSLR-A380
- Sony Alpha DSLR-A500
- Sony Alpha DSLR-A550
- Sony Alpha DSLR-A700
- Sony Alpha DSLR-A850
- Sony Alpha DSLR-A900
- Sony Cybershot DSC-W180, DSC-W190, DSC-W190R

a także:

Rollei Flexline 140, Movieline DV5, Movieline P30, Powerflex 210 HD, 240 HD, 460, Sportsline 60, X-8 Compact, XS-8, XS-10, XS-10 in TOUCH

Ricoh GR

Sigma DP1, DP1 Merrill, DP1s, DP1x, DP2, DP2 Merrill, DP2s, DP2x, DP3 Merrill, SD1, SD1 Merrill

Toshiba Camileo SX500, SX900