

Link do produktu: <https://sklepvideo.pl/kabel-usb-uc-e6-p-6015.html>



## Kabel USB - mini USB UC-E6

|                  |                        |
|------------------|------------------------|
| Cena             | <b>14,90 zł</b>        |
| Dostępność       | <b>Dostępny</b>        |
| Czas wysyłki     | <b>1-2 dni robocze</b> |
| Numer katalogowy | <b>ai102390</b>        |
| Kod producenta   | <b>8915691</b>         |
| Producent        | <b>COM</b>             |

### Opis produktu

Kabel USB do aparatów cyfrowych z gniazdem 8-pin

#### Zastępuje m.in. kable:

- Fuji P10NA00990A, Type IV, FZ06584-100, FZ06584-101, FZ06585-101
- Panasonic K1HA08CD0007, K1HA08CD0013, K1HA08CD0019, K1HY08YY0040
- Konica Minolta USB-2, Konica Minolta USB-3
- Nikon Part # YM080315, UCE6, UC-E6, UC-E16, UC-E17
- Olympus 202059, CB-USB7, P645-083-1355, N2155600
- Pentax I-USB7, I-USB17, I-USB33
- Sony 183306211, 183431111, 319698101, 35618-FF-147
- Sanyo USBMB8P-ROUND06

#### Pasuje m.in. do aparatów:

##### Epson

- Epson PhotoPC 850Z

##### Fuji

- Fuji FinePix 20
- Fuji FinePix 40
- Fuji FinePix 50
- Fuji FinePix 100
- Fuji FinePix 480
- Fuji FinePix 5700
- Fuji FinePix 8000
- Fuji FinePix 8100
- Fuji FinePix A100
- Fuji FinePix A150
- Fuji FinePix A170
- Fuji FinePix A175
- Fuji FinePix A220
- Fuji FinePix A225
- Fuji FinePix A850
- Fuji FinePix A860
- Fuji FinePix AV100
- Fuji FinePix AV105
- Fuji FinePix AV150
- Fuji FinePix AV200
- Fuji FinePix AV230
- Fuji FinePix AV235
- Fuji FinePix AV250

- 
- Fuji FinePix AV280
  - Fuji FinePix AX200
  - Fuji FinePix AX250
  - Fuji FinePix AX300
  - Fuji FinePix AX330
  - Fuji FinePix AX350
  - Fuji FinePix AX380
  - Fuji FinePix AX550
  - Fuji FinePix F20, F20fd, F20se
  - Fuji FinePix F30, F30fd
  - Fuji FinePix F31, F31fd
  - Fuji FinePix F40, F40fd
  - Fuji FinePix F45, F45fd
  - Fuji FinePix F47, F47fd
  - Fuji FinePix F50, F50fd
  - Fuji FinePix F60fd
  - Fuji FinePix F650
  - Fuji FinePix F70EXR
  - Fuji FinePix F75EXR
  - Fuji FinePix F100, F100fd
  - Fuji FinePix F460
  - Fuji FinePix F470
  - Fuji FinePix F480
  - Fuji FinePix F500EXR
  - Fuji FinePix F505EXR
  - Fuji FinePix F600EXR
  - Fuji FinePix F650
  - Fuji FinePix F660EXR
  - Fuji FinePix F770EXR
  - Fuji FinePix HS10
  - Fuji FinePix HS11
  - Fuji FinePix HS20EXR
  - Fuji FinePix HS22EXR
  - Fuji FinePix J10
  - Fuji FinePix J12
  - Fuji FinePix J15, J15fd
  - Fuji FinePix J20
  - Fuji FinePix J26
  - Fuji FinePix J27
  - Fuji FinePix J28
  - Fuji FinePix J29
  - Fuji FinePix J30
  - Fuji FinePix J32
  - Fuji FinePix J35
  - Fuji FinePix J37
  - Fuji FinePix J38
  - Fuji FinePix J40
  - Fuji FinePix J50, J50fd
  - Fuji FinePix J100, J100w
  - Fuji FinePix J110, J110w
  - Fuji FinePix J120, J120w
  - Fuji FinePix J150, J150w
  - Fuji FinePix J210
  - Fuji FinePix J250
  - Fuji FinePix JV100
  - Fuji FinePix JV150
  - Fuji FinePix JV200
  - Fuji FinePix JV205
  - Fuji FinePix JX250
  - Fuji FinePix JV255
  - Fuji FinePix JV500
  - Fuji FinePix JX280
  - Fuji FinePix JX290
  - Fuji FinePix JX295
  - Fuji FinePix JX300
  - Fuji FinePix JX305
  - Fuji FinePix JX330
  - Fuji FinePix JX335
  - Fuji FinePix JX350

- 
- Fuji FinePix JX355
  - Fuji FinePix JX370
  - Fuji FinePix JX390
  - Fuji FinePix JX400
  - Fuji FinePix JX420
  - Fuji FinePix JX440
  - Fuji FinePix JX500
  - Fuji FinePix JX520
  - Fuji FinePix JX530
  - Fuji FinePix JX540
  - Fuji FinePix JX550
  - Fuji FinePix JX580
  - Fuji FinePix JX590
  - Fuji FinePix JX700
  - Fuji FinePix JX710
  - Fuji FinePix JZ100
  - Fuji FinePix JZ110
  - Fuji FinePix JZ250
  - Fuji FinePix JZ260
  - Fuji FinePix JZ300
  - Fuji FinePix JZ305
  - Fuji FinePix JZ310
  - Fuji FinePix JZ370
  - Fuji FinePix JZ500
  - Fuji FinePix JZ505
  - Fuji FinePix L30
  - Fuji FinePix L50
  - Fuji FinePix L55
  - Fuji FinePix S100FS
  - Fuji FinePix S700
  - Fuji FinePix S800fd
  - Fuji FinePix S1000, S1000fd
  - Fuji FinePix S1500fd
  - Fuji FinePix S1600fd
  - Fuji FinePix S1700fd
  - Fuji FinePix S1730fd
  - Fuji FinePix S1770fd
  - Fuji FinePix S1780 HD
  - Fuji FinePix S1800fd
  - Fuji FinePix S1850 HD
  - Fuji FinePix S1880 HD
  - Fuji FinePix S1900fd
  - Fuji FinePix S2000, S2000fd, S2000 HD
  - Fuji FinePix S2500 HD
  - Fuji FinePix S2550 HD
  - Fuji FinePix S2600 HD
  - Fuji FinePix S2700 HD
  - Fuji FinePix S2750 HD
  - Fuji FinePix S2800 HD
  - Fuji FinePix S2850 HD
  - Fuji FinePix S2900 HD
  - Fuji FinePix S2940 HD
  - Fuji FinePix S2950 HD
  - Fuji FinePix S2990 HD
  - Fuji FinePix S2995 HD
  - Fuji FinePix S3200 HD
  - Fuji FinePix S3250 HD
  - Fuji FinePix S3300 HD
  - Fuji FinePix S3350 HD
  - Fuji FinePix S3400 HD
  - Fuji FinePix S3450 HD
  - Fuji FinePix S3900 HD
  - Fuji FinePix S4000 HD
  - Fuji FinePix S4050 HD
  - Fuji FinePix S4080 HD
  - Fuji FinePix S4200 HD
  - Fuji FinePix S4300 HD
  - Fuji FinePix S4400 HD
  - Fuji FinePix S4500 HD

- 
- Fuji FinePix S4530 HD
  - Fuji FinePix S5700
  - Fuji FinePix S5800
  - Fuji FinePix S8000, S8000fd
  - Fuji FinePix S8100, S8100fd
  - Fuji FinePix T190
  - Fuji FinePix T200
  - Fuji FinePix T205
  - Fuji FinePix T210
  - Fuji FinePix T300
  - Fuji FinePix T305
  - Fuji FinePix T310
  - Fuji FinePix T350
  - Fuji FinePix T360
  - Fuji FinePix T400
  - Fuji FinePix T410
  - Fuji FinePix T500
  - Fuji FinePix T510
  - Fuji FinePix T550
  - Fuji FinePix T560
  - Fuji X10
  - Fuji X100
  - Fuji X-pro 1
  - Fuji X-S1
  - Fuji FinePix XP10
  - Fuji FinePix XP20
  - Fuji FinePix XP22
  - Fuji FinePix XP30
  - Fuji FinePix XP60
  - Fuji FinePix XP100
  - Fuji FinePix XP150
  - Fuji FinePix XP170
  - Fuji FinePix XP200
  - Fuji FinePix Z5
  - Fuji FinePix Z10, Z10fd
  - Fuji FinePix Z20, Z20fd
  - Fuji FinePix Z30, Z30fd
  - Fuji FinePix Z31
  - Fuji FinePix Z33, Z33fd, Z33sw, Z33wp
  - Fuji FinePix Z35
  - Fuji FinePix Z37
  - Fuji FinePix Z50fd
  - Fuji FinePix Z100, Z100fd
  - Fuji FinePix Z110
  - Fuji FinePix Z115
  - Fuji FinePix Z200, Z200fd
  - Fuji FinePix Z250fd
  - Fuji FinePix Z300
  - Fuji FinePix Z700 EXR
  - Fuji FinePix Z800 EXR
  - Fuji FinePix Z950 EXR
  - Fuji FinePix Z1000 EXR
  - Fuji FinePix Z1010 EXR
  - Fuji M1
  - Fuji Real 3D W1
  - Fuji Real 3D W3

---

## Konica Minolta

- DiMAGE A200
- DiMAGE E323
- DiMAGE E500
- DiMAGE X1 Cradle
- DiMAGE X50
- DiMAGE X60
- DiMAGE Z10
- DiMAGE Z3
- DiMAGE Z5
- DiMAGE Z6

- 
- DiMAGE Z20
  - Dynax 5D
  - Dynax 7D
  - Maxxum 5D
  - Maxxum 7D

---

## Nikon

- Nikon Coolpix 2100
- Nikon Coolpix 2200
- Nikon Coolpix 3100
- Nikon Coolpix 3200
- Nikon Coolpix 3700
- Nikon Coolpix 4100
- Nikon Coolpix 4200
- Nikon Coolpix 4600
- Nikon Coolpix 4800
- Nikon Coolpix 5200
- Nikon Coolpix 5600
- Nikon Coolpix 5900
- Nikon Coolpix 7600
- Nikon Coolpix 7900
- Nikon Coolpix 8400
- Nikon Coolpix 8800
- Nikon Coolpix A10
- Nikon Coolpix A100
- Nikon Coolpix A300
- Nikon Coolpix AW100
- Nikon Coolpix AW110
- Nikon Coolpix L1
- Nikon Coolpix L2
- Nikon Coolpix L3
- Nikon Coolpix L4
- Nikon Coolpix L5
- Nikon Coolpix L6
- Nikon Coolpix L10
- Nikon Coolpix L11
- Nikon Coolpix L12
- Nikon Coolpix L14
- Nikon Coolpix L15
- Nikon Coolpix L16
- Nikon Coolpix L18
- Nikon Coolpix L19
- Nikon Coolpix L20
- Nikon Coolpix L22
- Nikon Coolpix L24
- Nikon Coolpix L27
- Nikon Coolpix L28
- Nikon Coolpix L29
- Nikon Coolpix L30
- Nikon Coolpix L31
- Nikon Coolpix L32
- Nikon Coolpix L100
- Nikon Coolpix L110
- Nikon Coolpix L120
- Nikon Coolpix L320
- Nikon Coolpix L340
- Nikon Coolpix L610
- Nikon Coolpix L620
- Nikon Coolpix L810
- Nikon Coolpix L820
- Nikon Coolpix L830
- Nikon Coolpix P1
- Nikon Coolpix P2
- Nikon Coolpix P3
- Nikon Coolpix P4
- Nikon Coolpix P50
- Nikon Coolpix P60
- Nikon Coolpix P80

- 
- Nikon Coolpix P90
  - Nikon Coolpix P100
  - Nikon Coolpix P300
  - Nikon Coolpix P310
  - Nikon Coolpix P330
  - Nikon Coolpix P500
  - Nikon Coolpix P510
  - Nikon Coolpix P520
  - Nikon Coolpix P530
  - Nikon Coolpix P5000
  - Nikon Coolpix P5100
  - Nikon Coolpix P6000
  - Nikon Coolpix P7000
  - Nikon Coolpix P7100
  - Nikon Coolpix P7700
  - Nikon Coolpix P7800
  - Nikon Coolpix S4
  - Nikon Coolpix S9
  - Nikon Coolpix S10
  - Nikon Coolpix S70
  - Nikon Coolpix S80
  - Nikon Coolpix S100
  - Nikon Coolpix S200
  - Nikon Coolpix S203
  - Nikon Coolpix S210
  - Nikon Coolpix S220
  - Nikon Coolpix S230
  - Nikon Coolpix S500
  - Nikon Coolpix S510
  - Nikon Coolpix S520
  - Nikon Coolpix S560
  - Nikon Coolpix S570
  - Nikon Coolpix S600
  - Nikon Coolpix S620
  - Nikon Coolpix S630
  - Nikon Coolpix S640
  - Nikon Coolpix S710
  - Nikon Coolpix S800c
  - Nikon Coolpix S1000pj
  - Nikon Coolpix S1200pj
  - Nikon Coolpix S2700
  - Nikon Coolpix S2900
  - Nikon Coolpix S3000
  - Nikon Coolpix S3100
  - Nikon Coolpix S3200
  - Nikon Coolpix S3300
  - Nikon Coolpix S3400
  - Nikon Coolpix S3500
  - Nikon Coolpix S3600
  - Nikon Coolpix S3700
  - Nikon Coolpix S4000
  - Nikon Coolpix S4100
  - Nikon Coolpix S4200
  - Nikon Coolpix S4300
  - Nikon Coolpix S5100
  - Nikon Coolpix S5200
  - Nikon Coolpix S6000
  - Nikon Coolpix S6100
  - Nikon Coolpix S6200
  - Nikon Coolpix S6300
  - Nikon Coolpix S6400
  - Nikon Coolpix S6500
  - Nikon Coolpix S6800
  - Nikon Coolpix S8000
  - Nikon Coolpix S8100
  - Nikon Coolpix S8200
  - Nikon Coolpix S9050
  - Nikon Coolpix S9100
  - Nikon Coolpix S9200

- 
- Nikon Coolpix S9300
  - Nikon Coolpix S9400
  - Nikon Coolpix S9500
  - Nikon D750
  - Nikon D3200
  - Nikon D3300
  - Nikon D5000
  - Nikon D5100
  - Nikon D5300
  - Nikon D5500
  - Nikon D7100
  - Nikon D7200
  - Nikon DF

---

## Olympus

- Olympus FE-20
- Olympus FE-35
- Olympus FE-45
- Olympus FE-46
- Olympus FE-47
- Olympus FE-150
- Olympus FE-160
- Olympus FE-170
- Olympus FE-180
- Olympus FE-190
- Olympus FE-210
- Olympus FE-220
- Olympus FE-230
- Olympus FE-235
- Olympus FE-240
- Olympus FE-250
- Olympus FE-270
- Olympus FE-280
- Olympus FE-290
- Olympus FE-300
- Olympus FE-310
- Olympus FE-320
- Olympus FE-340
- Olympus FE-350
- Olympus FE-360
- Olympus FE-370
- Olympus FE-3000
- Olympus FE-3010
- Olympus FE-4000
- Olympus FE-4010
- Olympus FE-4050
- Olympus FE-5000
- Olympus FE-5010
- Olympus FE-5020
- Olympus FE-5035
- Olympus FE-5050
- Olympus T-100
- Olympus VG-120
- Olympus VG-130
- Olympus VG-140
- Olympus VG-170
- Olympus VR-310
- Olympus VR-320
- Olympus VR-325
- Olympus VR-330
- Olympus VR-340
- Olympus VR-350
- Olympus VR-360
- Olympus VR-370 / D-785
- Olympus X-15
- Olympus X-730
- Olympus X-785
- Olympus X-790

- 
- Olympus X-795
  - Olympus X-800
  - Olympus X-820
  - Olympus X-835
  - Olympus X-845

---

## Panasonic

- Audio SVSD300GC
- Audio SVSD350VGH
- Lumix DMC-DZ15
- Lumix DMC-F5
- Lumix DMC-FS3, DMC-FS3A, DMC-FS3P, DMC-FS3S
- Lumix DMC-FS5, DMC-FS5K, DMC-FS5R, DMC-FS5S
- Lumix DMC-FS6
- Lumix DMC-FS7
- Lumix DMC-FS15
- Lumix DMC-FS20, DMCFS20S
- Lumix DMC-FX01, DMC-FX01, DMC-FX01EB, DMC-FX01EE, DMC-FX01EF, DMC-FX01EG, DMC-FX01EGM, DMC-FX01GC, DMC-FX01GD, DMC-FX01GK, DMC-FX01GN, DMC-FX01GT, DMC-FX01P, DMC-FX01PL, DMC-FX01PP, DMC-FX01S, DMC-FX01SG
- Panasonic Lumix DMC-FX07, DMC-FX07, DMC-FX07K, DMC-FX07PP, DMC-FX07PP, DMC-FX07R, DMC-FX07T
- Panasonic Lumix DMC-FX2
- Panasonic Lumix DMC-FX3
- Panasonic Lumix DMC-FX7
- Panasonic Lumix DMC-FX8
- Panasonic Lumix DMC-FX9
- Panasonic Lumix DMC-FX10
- Panasonic Lumix DMC-FX12
- Panasonic Lumix DMC-FX15
- Panasonic Lumix DMC-FX30
- Panasonic Lumix DMC-FX33
- Panasonic Lumix DMC-FX35, DMC-FX35A, DMC-FX35K, DMC-FX35S
- Panasonic Lumix DMC-FX36
- Panasonic Lumix DMC-FX37
- Panasonic Lumix DMC-FX38
- Panasonic Lumix DMC-FX50, DMC-FX50PP
- Panasonic Lumix DMC-FX55, DMC-FX55P
- Panasonic Lumix DMC-FX100, DMC-FX100P, DMC-FX100P
- Panasonic Lumix DMC-FX150
- Panasonic Lumix DMC-FX180
- Panasonic Lumix DMC-FX500
- Panasonic Lumix DMC-FX520
- Panasonic Lumix DMC-FX580
- Panasonic Lumix DMC-FZ1
- Panasonic Lumix DMC-FZ2
- Panasonic Lumix DMC-FZ3
- Panasonic Lumix DMC-FZ4
- Panasonic Lumix DMC-FZ5
- Panasonic Lumix DMC-FZ7, DMC-FZ7EB, DMC-FZ7EE, DMC-FZ7EF, DMC-FZ7EG, DMC-FZ7EGM, DMC-FZ7GC, DMC-FZ7GD, DMC-FZ7GK, DMC-FZ7GN, DMC-FZ7GT, DMC-FZ7PL, DMC-FZ7PP, DMC-FZ7S, DMC-FZ7SG
- Panasonic Lumix DMC-FZ8
- Panasonic Lumix DMC-FZ10
- Panasonic Lumix DMC-FZ15
- Panasonic Lumix DMC-FZ18
- Panasonic Lumix DMC-FZ20
- Panasonic Lumix DMC-FZ25
- Panasonic Lumix DMC-FZ28
- Panasonic Lumix DMC-FZ30, DMC-FZ30EB, DMC-FZ30EG, DMC-FZ30EGM, DMC-FZ30GC, DMC-FZ30GD, DMC-FZ30GK, DMC-FZ30GN, DMC-FZ30GT, DMC-FZ30K, DMC-FZ30PL, DMC-FZ30PP, DMC-FZ30S, DMC-FZ30SG
- Panasonic Lumix DMC-FZ50
- Panasonic Lumix DMC-G1
- Panasonic Lumix DMC-GX1
- Panasonic Lumix DMC-GX7
- Panasonic Lumix DMC-GX8
- Panasonic Lumix DMC-L10, DMC-L10K, DMC-L10KEB/K
- Panasonic Lumix DMC-LS1
- Panasonic Lumix DMC-LS2, DMC-LS2EB, DMC-LS2EE, DMC-LS2EF, DMC-LS2EG, DMC-LS2EGM, DMC-LS2GC, DMC-LS2GK, DMC-LS2GN, DMC-LS2GT, DMC-LS2PL, DMC-LS2PP, DMC-LS2SG



- 
- Panasonic Lumix DMC-LS3, DMC-LS3EF, DMC-LS3EG, DMC-LS3EGM
  - Panasonic Lumix DMC-LS5, DMC-LS5E, DMC-LS5EE, DMC-LS5GC, DMC-LS5GF, DMC-LS5GN, DMC-LS5GW, DMC-LS5P, DMC-LS5PU
  - Panasonic Lumix DMC-LS6
  - Panasonic Lumix DMC-LS60
  - Panasonic Lumix DMC-LS65
  - Panasonic Lumix DMC-LS70
  - Panasonic Lumix DMC-LS75
  - Panasonic Lumix DMC-LS80
  - Panasonic Lumix DMC-LS85
  - Panasonic Lumix DMCLX1
  - Panasonic Lumix DMC-LX1
  - Panasonic Lumix DMC-LX1K
  - Panasonic Lumix DMCLX1PP
  - Panasonic Lumix DMC-LX1S
  - Panasonic Lumix DMC-LX2
  - Panasonic Lumix DMC-LX3
  - Panasonic Lumix DMC-LZ1
  - Panasonic Lumix DMC-LZ2
  - Panasonic Lumix DMC-LZ3, DMC-LZ3EB, DMC-LZ3EE, DMC-LZ3EF, DMC-LZ3EG, DMC-LZ3EGM, DMC-LZ3GC, DMC-LZ3GK, DMC-LZ3GN, DMC-LZ3GT, DMC-LZ3PL, DMC-LZ3PP
  - Panasonic Lumix DMC-LZ4, DMC-LZ4EB, DMC-LZ4EG, DMC-LZ4PP
  - Panasonic Lumix DMC-LZ5, DMC-LZ5EB, DMC-LZ5EE, DMC-LZ5EF, DMC-LZ5EG, DMC-LZ5EGM, DMC-LZ5GC, DMC-LZ5GK, DMC-LZ5GN, DMC-LZ5GT, DMC-LZ5PL, DMC-LZ5PP, DMC-LZ5SE, DMC-LZ5SEPP, DMC-LZ5SG
  - Panasonic Lumix DMC-LZ6
  - Panasonic Lumix DMC-LZ7
  - Panasonic Lumix DMC-LZ8, DMC-LZ8K, DMC-LZ8S
  - Panasonic Lumix DMC-LZ10, DMC-LZ10K, DMC-LZ10S
  - Panasonic Lumix DMC-SD4090
  - Panasonic Lumix DMC-SD5000
  - Panasonic Lumix DMC-SZ3
  - Panasonic Lumix DMC-SZ5
  - Panasonic Lumix DMC-SZ7
  - Panasonic Lumix DMC-SZ9
  - Panasonic Lumix DMC-SZ10
  - Panasonic Lumix DMC-SZ20
  - Panasonic Lumix DMC-SZ25
  - Panasonic Lumix DMC-SZ30
  - Panasonic Lumix DMC-TZ1, DMC-TZ1A, DMC-TZ1K, DMC-TZ1PP, DMC-TZ1S
  - Panasonic Lumix DMC-TZ2
  - Panasonic Lumix DMC-TZ3, DMCTZ3S,
  - Panasonic Lumix DMC-TZ4, DMC-TZ4K, DMC-TZ4S
  - Panasonic Lumix DMC-TZ5, DMC-TZ5A
  - Panasonic Lumix DMC-TZ11
  - Panasonic Lumix DMC-TZ15
  - Panasonic Lumix DMC-TZ24
  - Panasonic Lumix DMC-TZ25
  - Panasonic Lumix DMC-TZ27
  - Panasonic Lumix DMC-TZ30
  - Panasonic Lumix DMC-TZ31
  - Panasonic Lumix DMC-TZ35
  - Panasonic Lumix DMC-TZ36
  - Panasonic Lumix DMC-TZ37
  - Panasonic Lumix DMC-TZ40
  - Panasonic Lumix DMC-TZ41
  - Panasonic Lumix DMC-TZ50
  - Panasonic Lumix DMC-TZ50P
  - Panasonic Lumix DMC-TZ55
  - Panasonic Lumix DMC-TZ56
  - Panasonic Lumix DMC-TZ57
  - Panasonic Lumix DMC-TZ58
  - Panasonic Lumix DMC-TZ60
  - Panasonic Lumix DMC-TZ61
  - Panasonic Lumix DMC-TZ70
  - Panasonic Lumix DMC-TZ71

---

## Pentax

- Pentax \*ist DL

- 
- Pentax \*ist DS
  - Pentax \*ist DS2
  - Pentax K-7
  - Pentax K10D
  - Pentax K20D
  - Pentax K100D, K100D Super
  - Pentax K110D
  - Pentax K2000 (K-m)
  - Pentax K200D
  - Pentax Optio 33WR
  - Pentax Optio 430RS, 43WR
  - Pentax Optio 50, 50L
  - Pentax Optio 60
  - Pentax Optio 450
  - Pentax Optio 550
  - Pentax Optio 750Z
  - Pentax Optio A10
  - Pentax Optio A20
  - Pentax Optio A30
  - Pentax Optio A40
  - Pentax Optio E10
  - Pentax Optio E20
  - Pentax Optio E30
  - Pentax Optio E40
  - Pentax Optio E50
  - Pentax Optio E60
  - Pentax Optio E70L
  - Pentax Optio E75
  - Pentax Optio E80
  - Pentax Optio L20
  - Pentax Optio L50
  - Pentax Optio M4
  - Pentax Optio M10
  - Pentax Optio M20
  - Pentax Optio M30
  - Pentax Optio M40
  - Pentax Optio M50
  - Pentax Optio M60
  - Pentax Optio MX
  - Pentax Optio MX4
  - Pentax Optio P70
  - Pentax Optio P80
  - Pentax Optio S
  - Pentax Optio S10
  - Pentax Optio S12
  - Pentax Optio S4
  - Pentax Optio S4i
  - Pentax Optio S5i
  - Pentax Optio S5n
  - Pentax Optio S5z
  - Pentax Optio S6
  - Pentax Optio S7
  - Pentax Optio S40
  - Pentax Optio S45
  - Pentax Optio S50
  - Pentax Optio S55
  - Pentax Optio S60
  - Pentax Optio SV
  - Pentax Optio SVi
  - Pentax Optio T10
  - Pentax Optio T20
  - Pentax Optio T30
  - Pentax Optio V10
  - Pentax Optio V20
  - Pentax Optio W10
  - Pentax Optio W20
  - Pentax Optio W30
  - Pentax Optio W60
  - Pentax Optio W80

- 
- Pentax Optio WP
  - Pentax Optio WPi
  - Pentax Optio WS80
  - Pentax Optio X
  - Pentax Optio X70
  - Pentax Optio Z10

---

## Sanyo

- Sanyo Xacti VPC-E6
- Sanyo Xacti VPC-E7
- Sanyo Xacti VPC-E10
- Sanyo Xacti VPC-E60

VPC-E1500TP

- Sanyo Xacti VPC-S6
- Sanyo Xacti VPC-S7
- Sanyo Xacti VPC-S50
- Sanyo Xacti VPC-S60
- Sanyo Xacti VPC-S70
- Sanyo Xacti VPC-S500

---

## Praktica

DCZ 10.3, 12.Z4, 14.1, 14.2, 14.Z4, 4.4, 5.4, 5.5, 5.8, 7.4, DPix 1000Z, 1100Z, DVC 14.1 HDMI, 5.6 FHD

---

## Praktica Luxmedia

10-03, 10-23, 12-03, 12-04, 12-23, 12-Z4, 12-Z4TS, 12-Z5, 14-04, 14-05, 14-Z4, 14-Z4TS, 14-Z5, 14-Z50, 14-Z50S, 14-Z51, 14-Z80S, 16-Z12S, 16-Z21C, 16-Z21S, 16-Z24S, 16-Z26S, 16-Z51, 16-Z52, 18-Z36C, 6503, 8403, 8503

---

## Sony

- Sony Alpha DSLR-A100, DSLR-A100K
- Sony Alpha DSLR-A200, DSLR-A200K
- Sony Alpha DSLR-A300
- Sony Alpha DSLR-A330
- Sony Alpha DSLR-A350
- Sony Alpha DSLR-A380
- Sony Alpha DSLR-A500
- Sony Alpha DSLR-A550
- Sony Alpha DSLR-A700
- Sony Alpha DSLR-A850
- Sony Alpha DSLR-A900
- Sony Cybershot DSC-W180, DSC-W190, DSC-W190R

a także:

Rollei Flexline 140, Movieline DV5, Movieline P30, Powerflex 210 HD, 240 HD, 460, Sportsline 60, X-8 Compact, XS-8, XS-10, XS-10 in TOUCH

Ricoh GR

Sigma DP1, DP1 Merrill, DP1s, DP1x, DP2, DP2 Merrill, DP2s, DP2x, DP3 Merrill, SD1, SD1 Merrill

Toshiba Camileo SX500, SX900